


# Quality Control Sample

## Reformer Feed - Box no. 20001.410


### 0 - 20 min

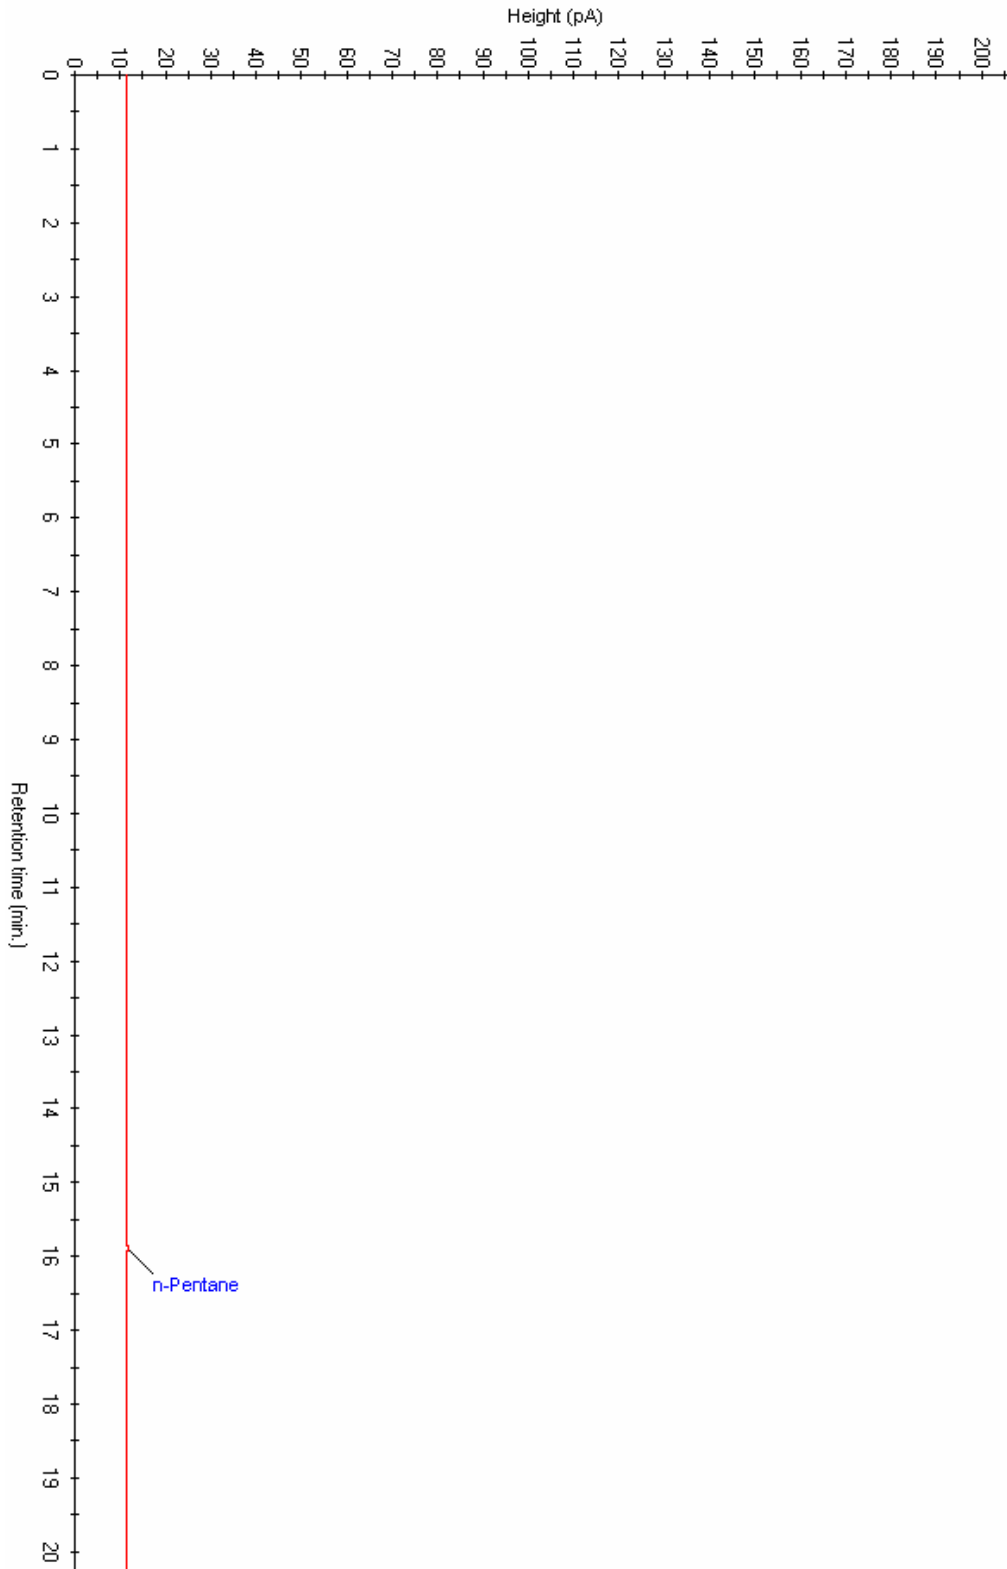

# Quality Control Sample

## Reformer Feed - Box no. 20001.410


### 20 - 40 min

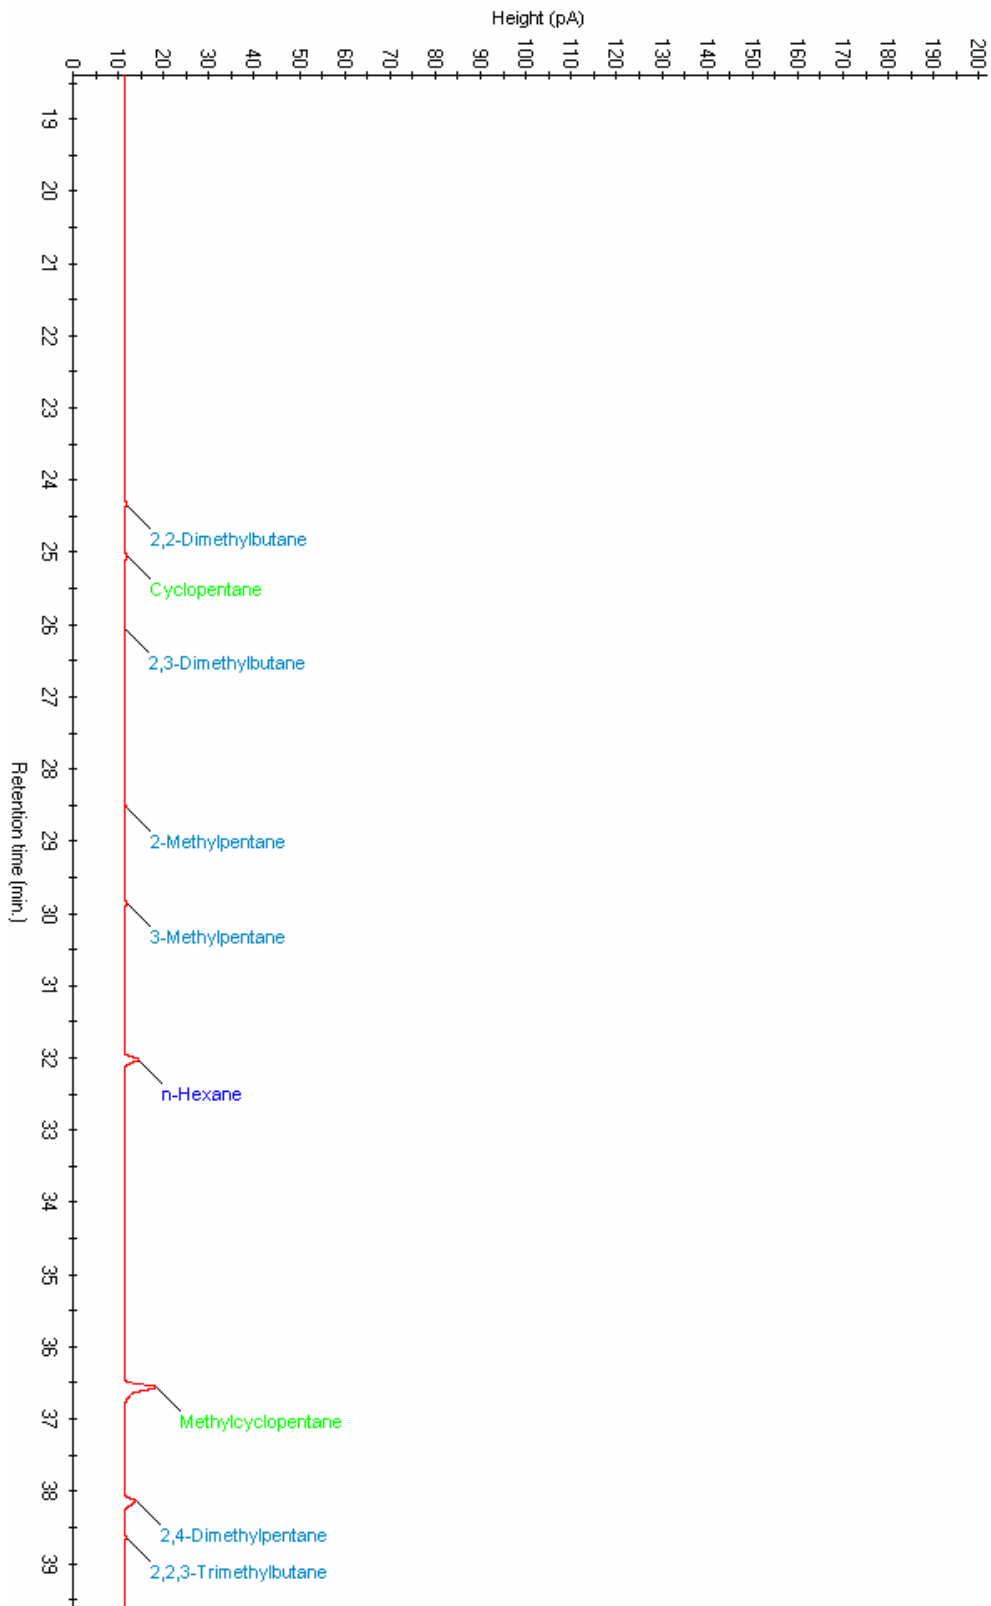

# Quality Control Sample

## Reformer Feed - Box no. 20001.410


### 40 - 60 min

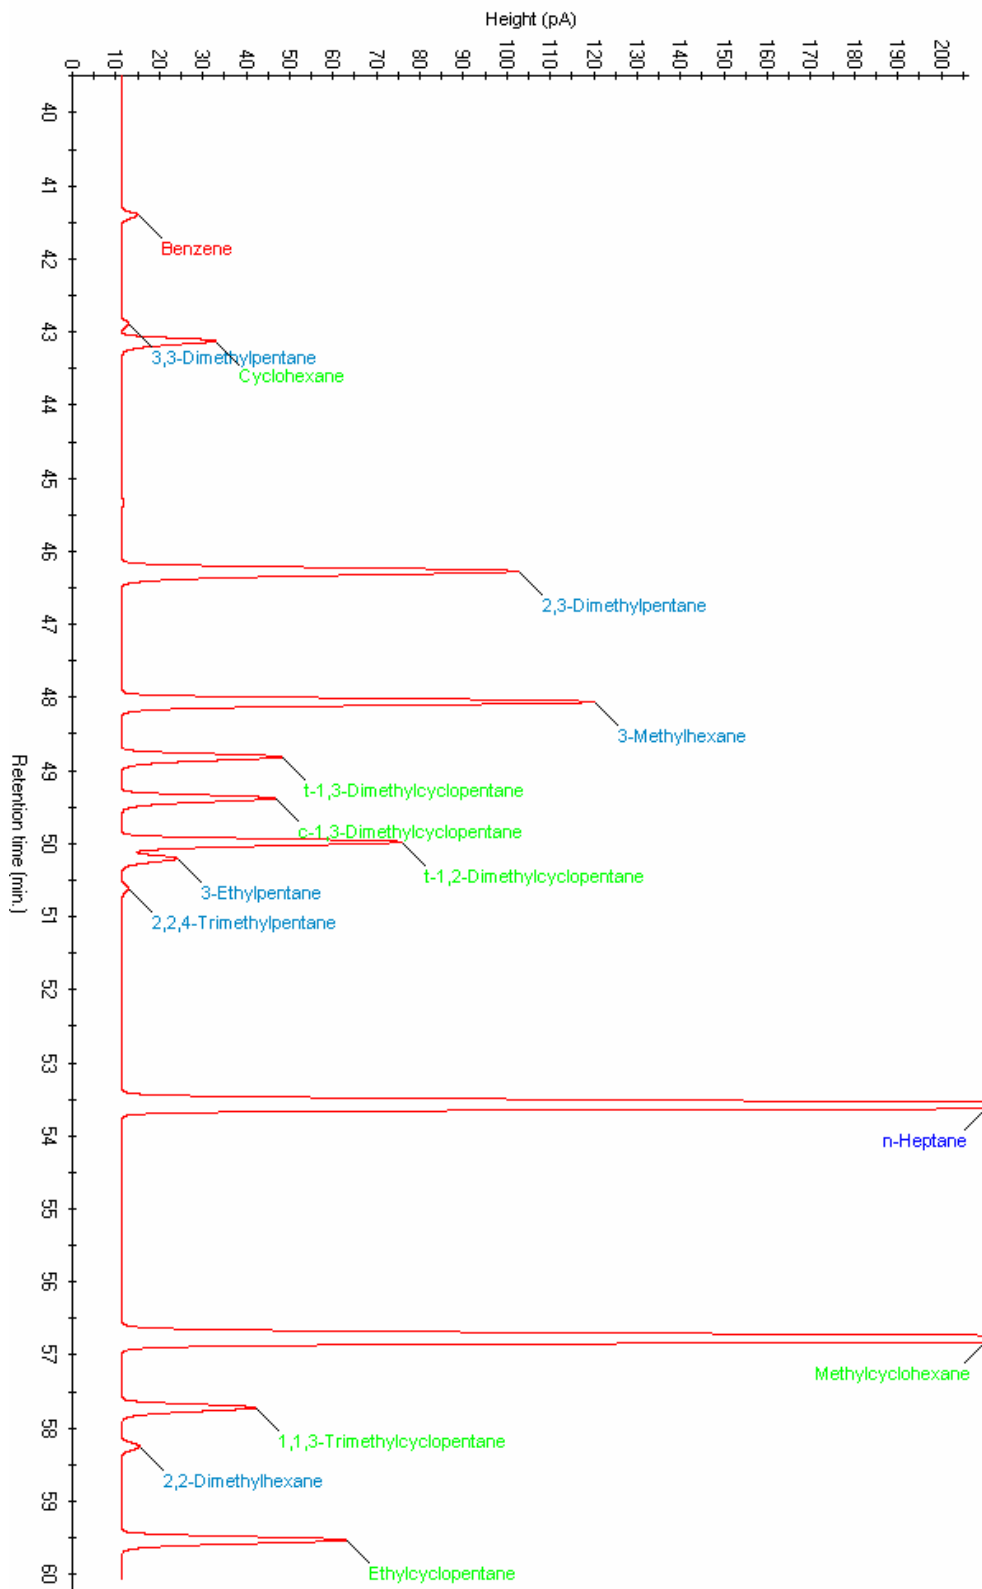

# Quality Control Sample

## Reformer Feed - Box no. 20001.410


### 60 - 80 min

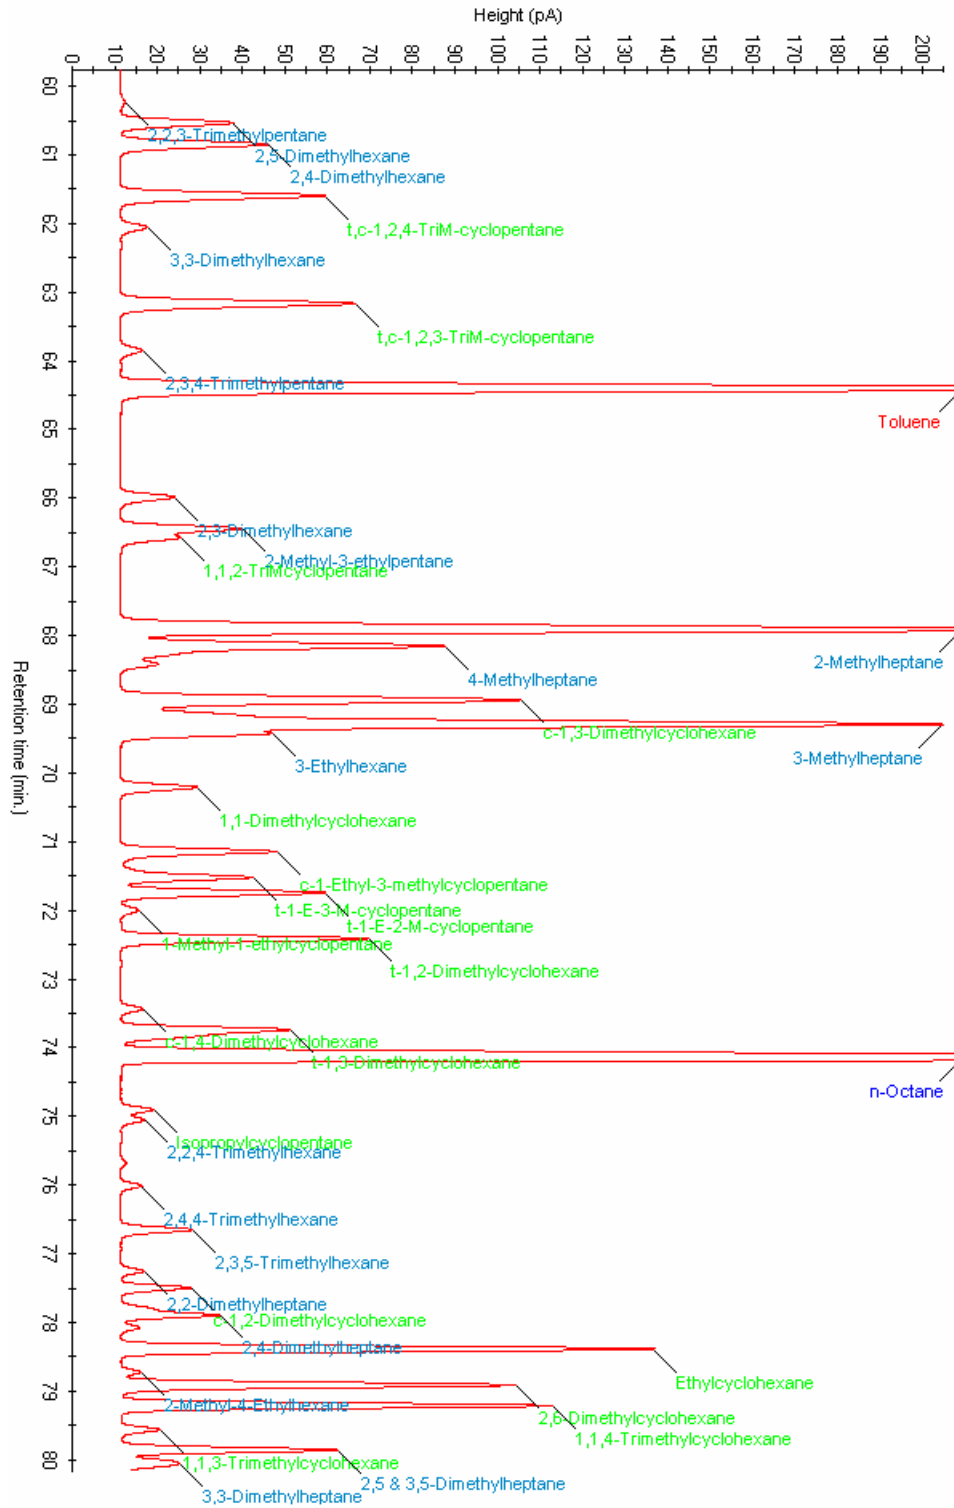

# Quality Control Sample

## Reformer Feed - Box no. 20001.410


### 80 - 100 min

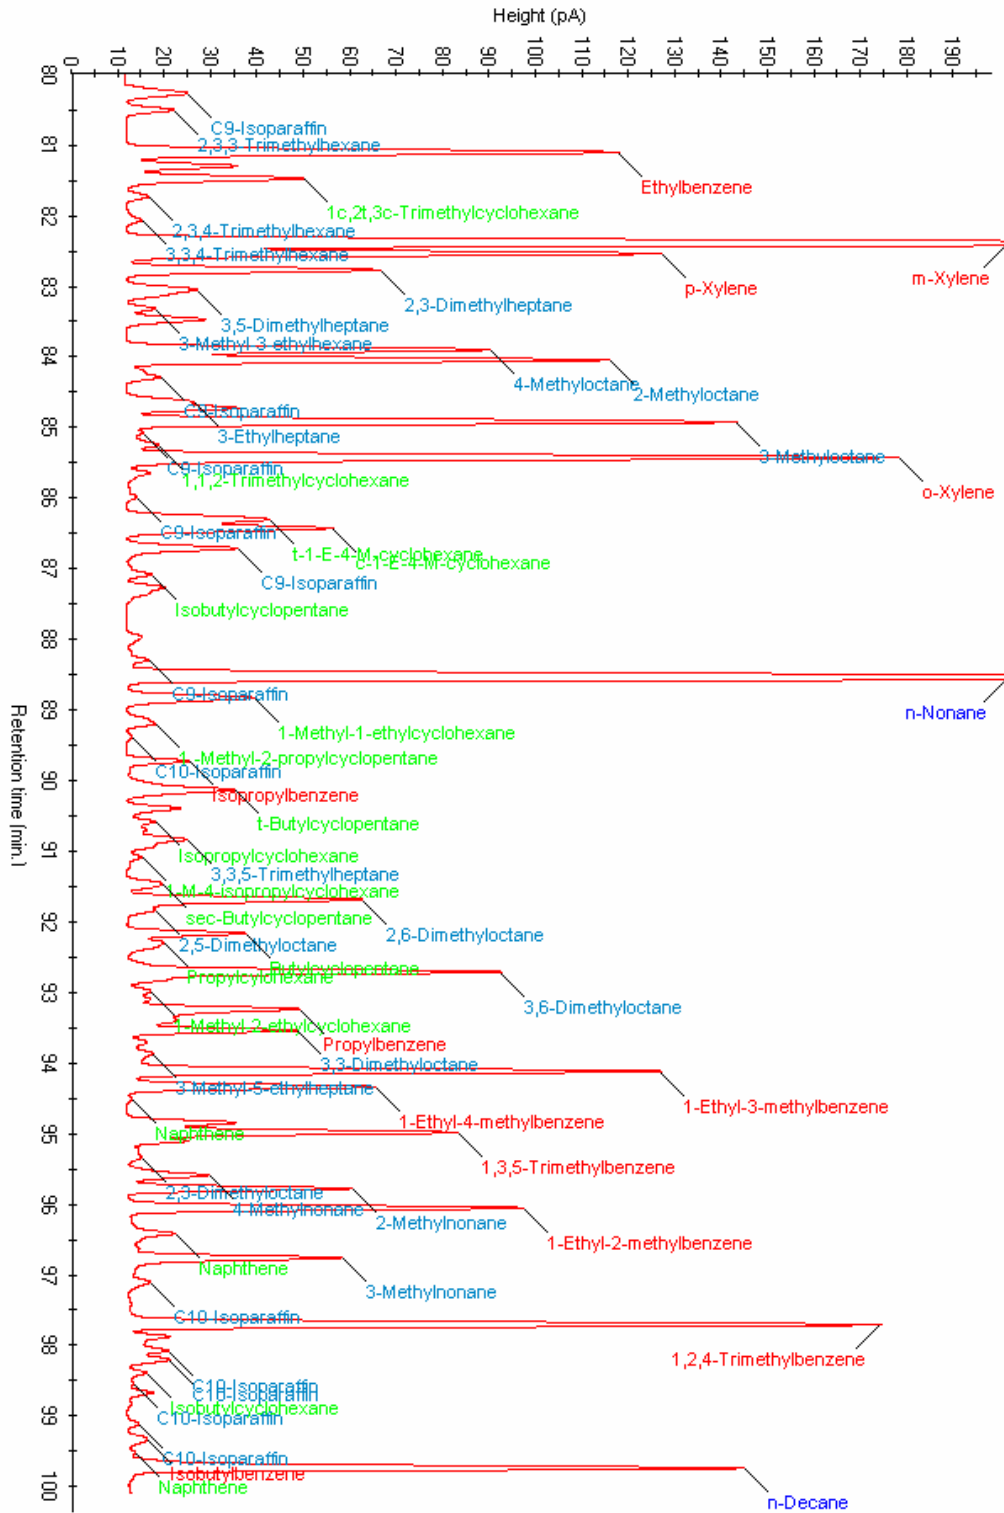

# Quality Control Sample

## Reformer Feed - Box no. 20001.410


### 100 - 120 min

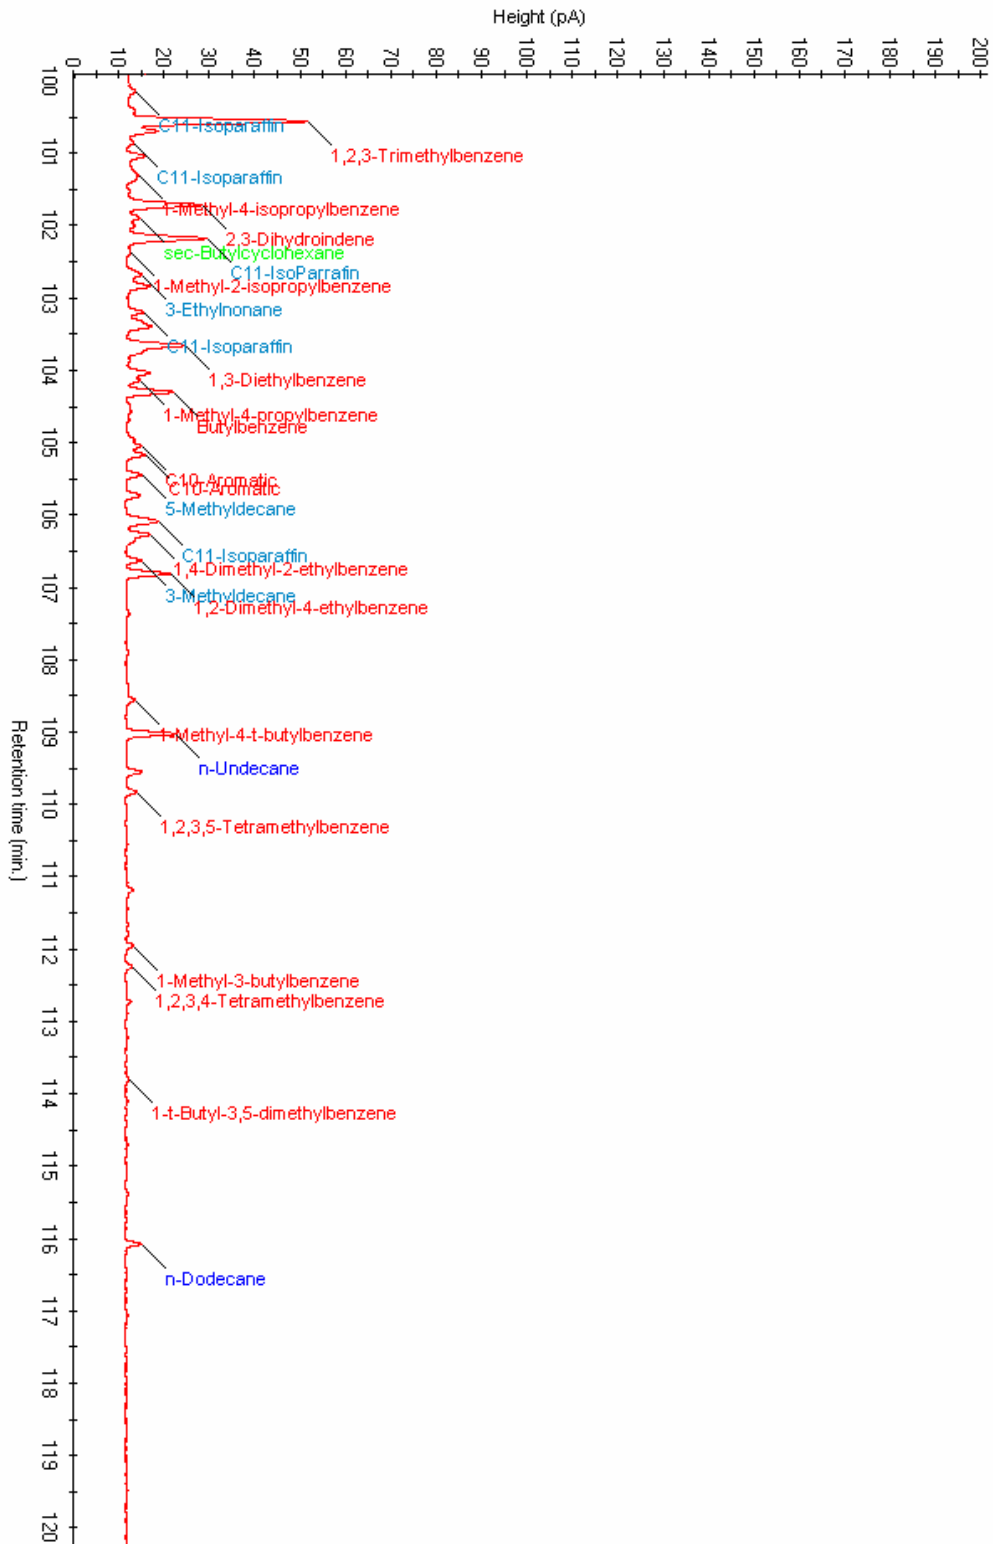

# Quality Control Sample

## Reformer Feed - Box no. 20001.410


### 120 - 140 min

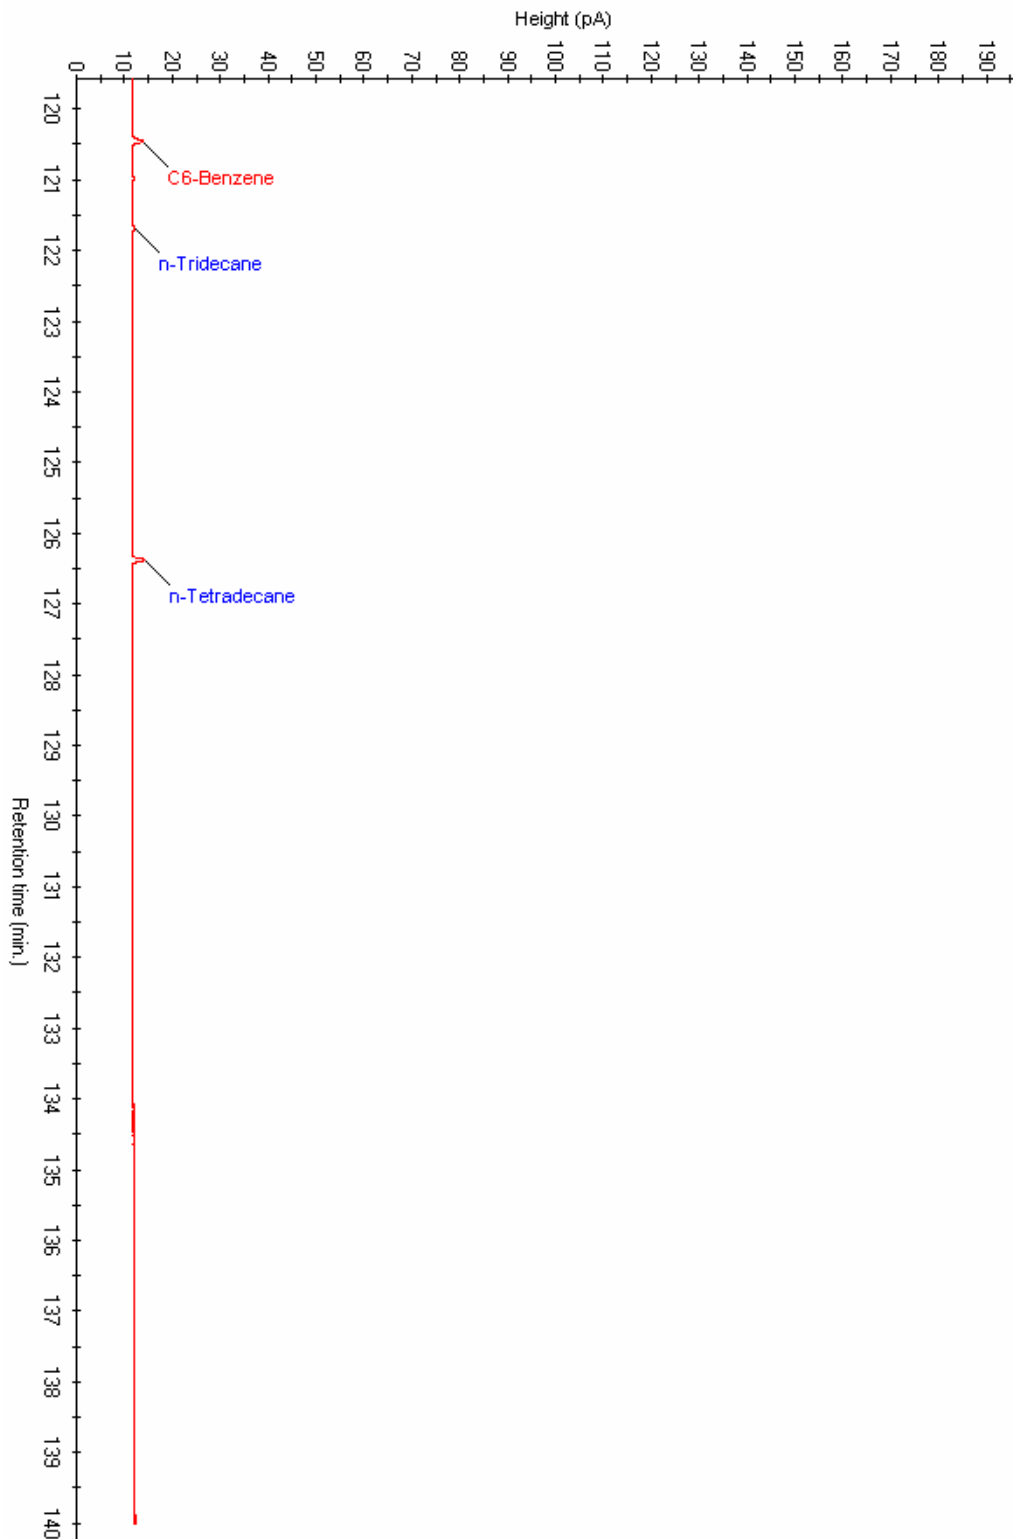

# Quality Control Sample

## Reformat - Box no. 20001.411


### 0 – 20 min

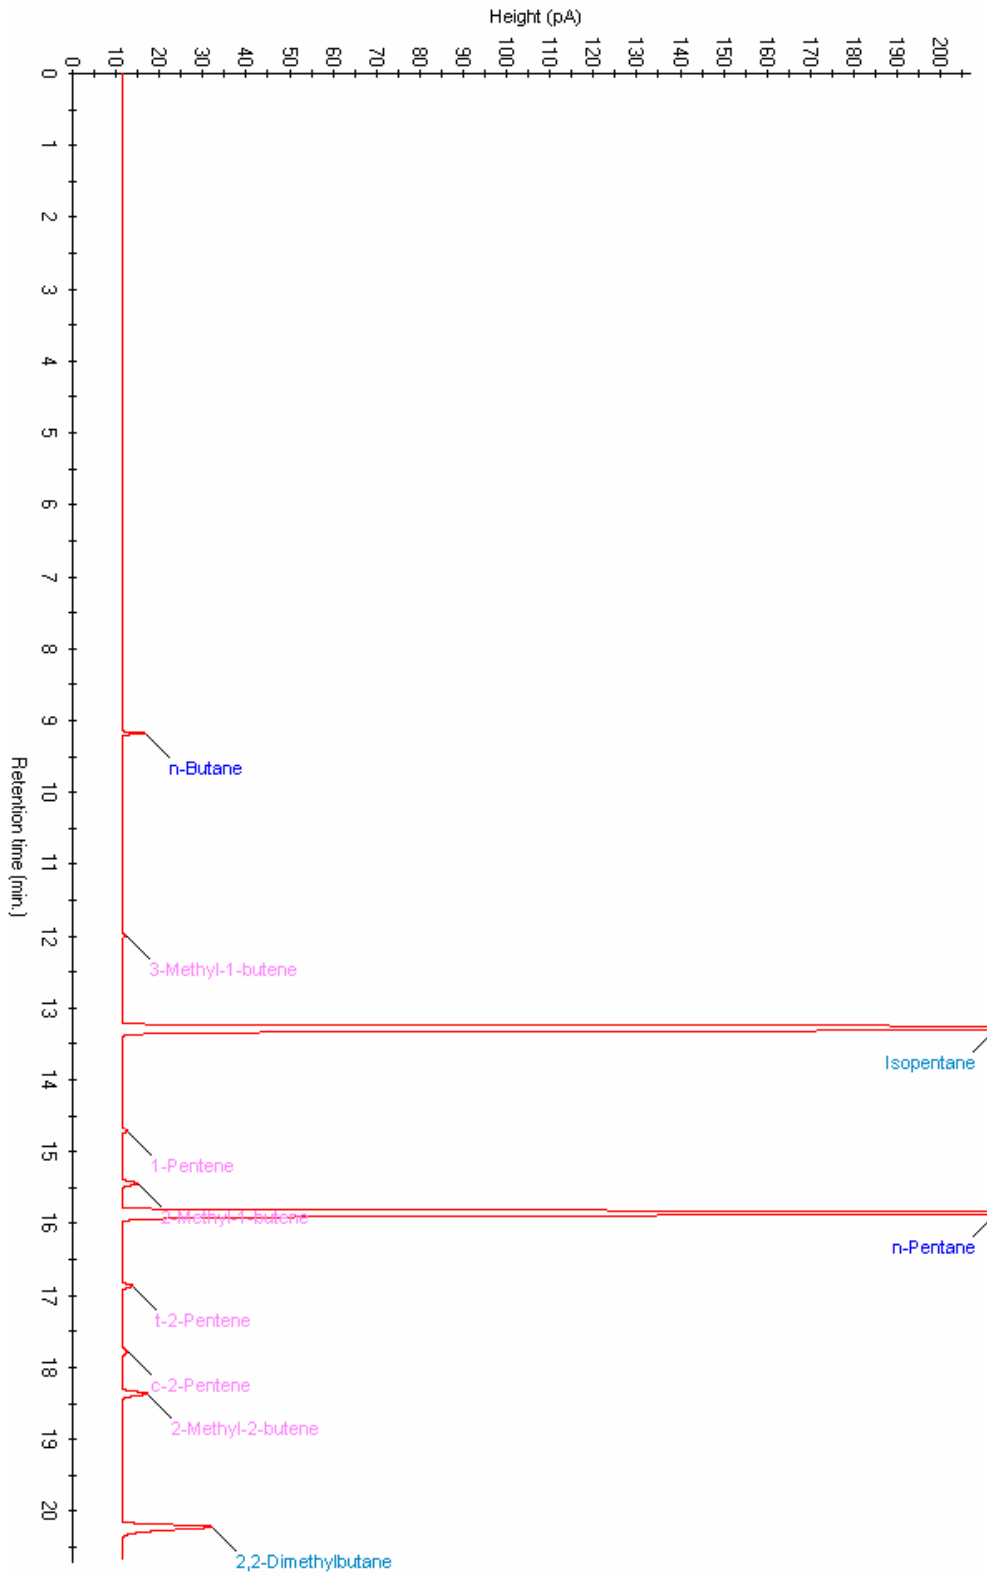

# Quality Control Sample

## Reformat - Box no. 20001.411


### 20 – 40 min

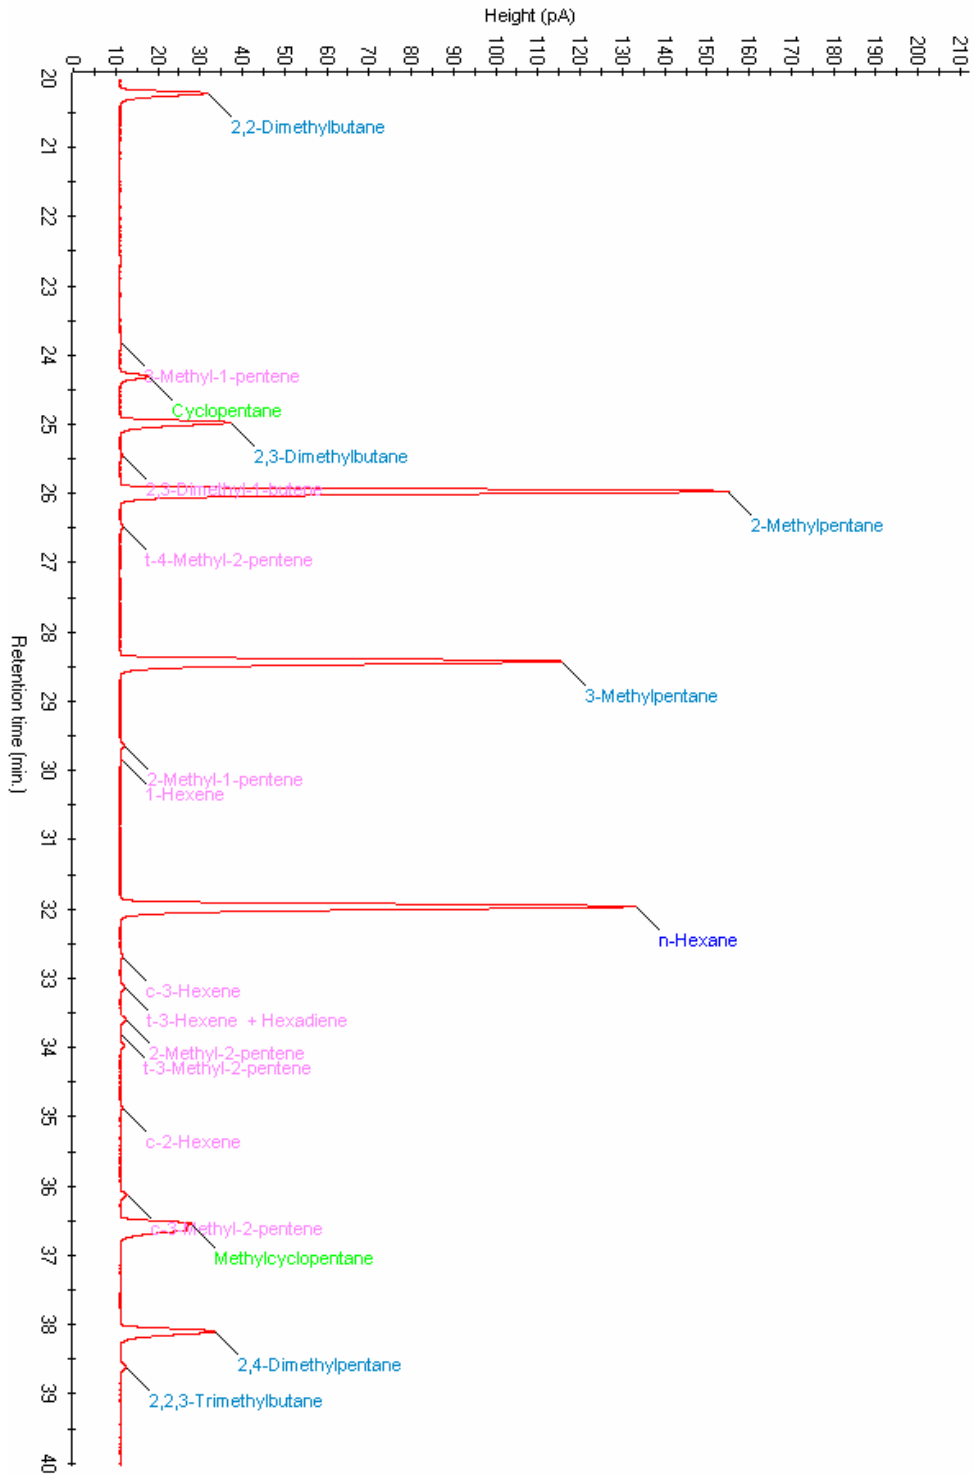

# Quality Control Sample

## Reformat - Box no. 20001.411


### 40 – 60 min

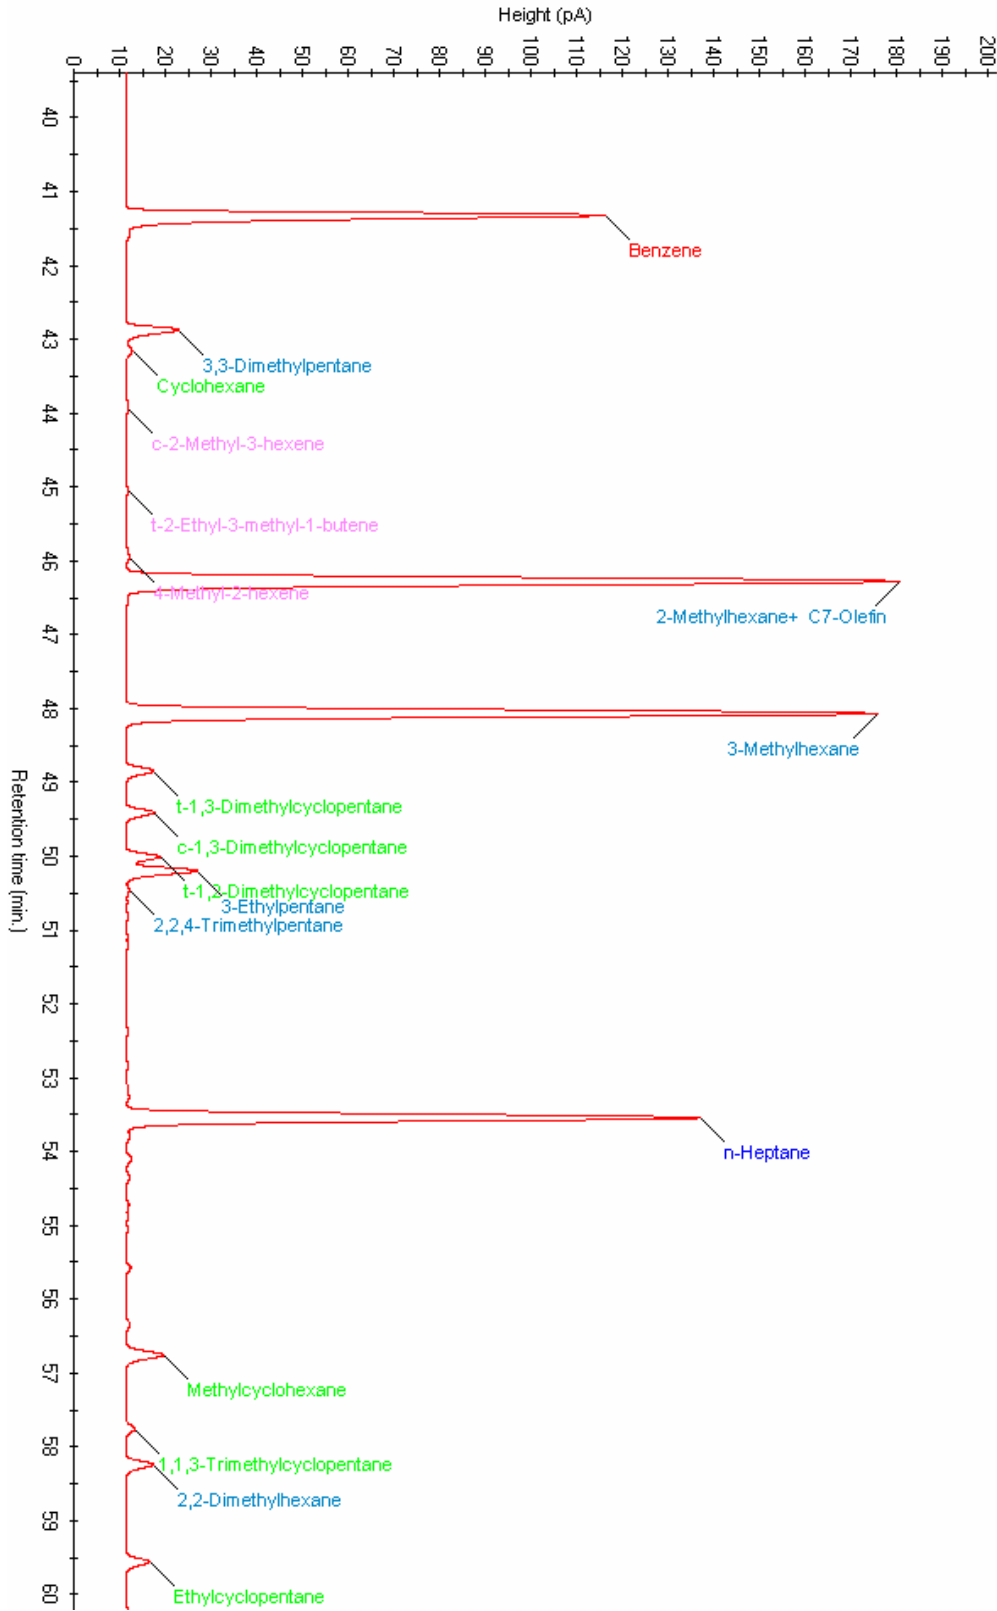

# Quality Control Sample

## Reformat - Box no. 20001.411


### 60 – 80 min

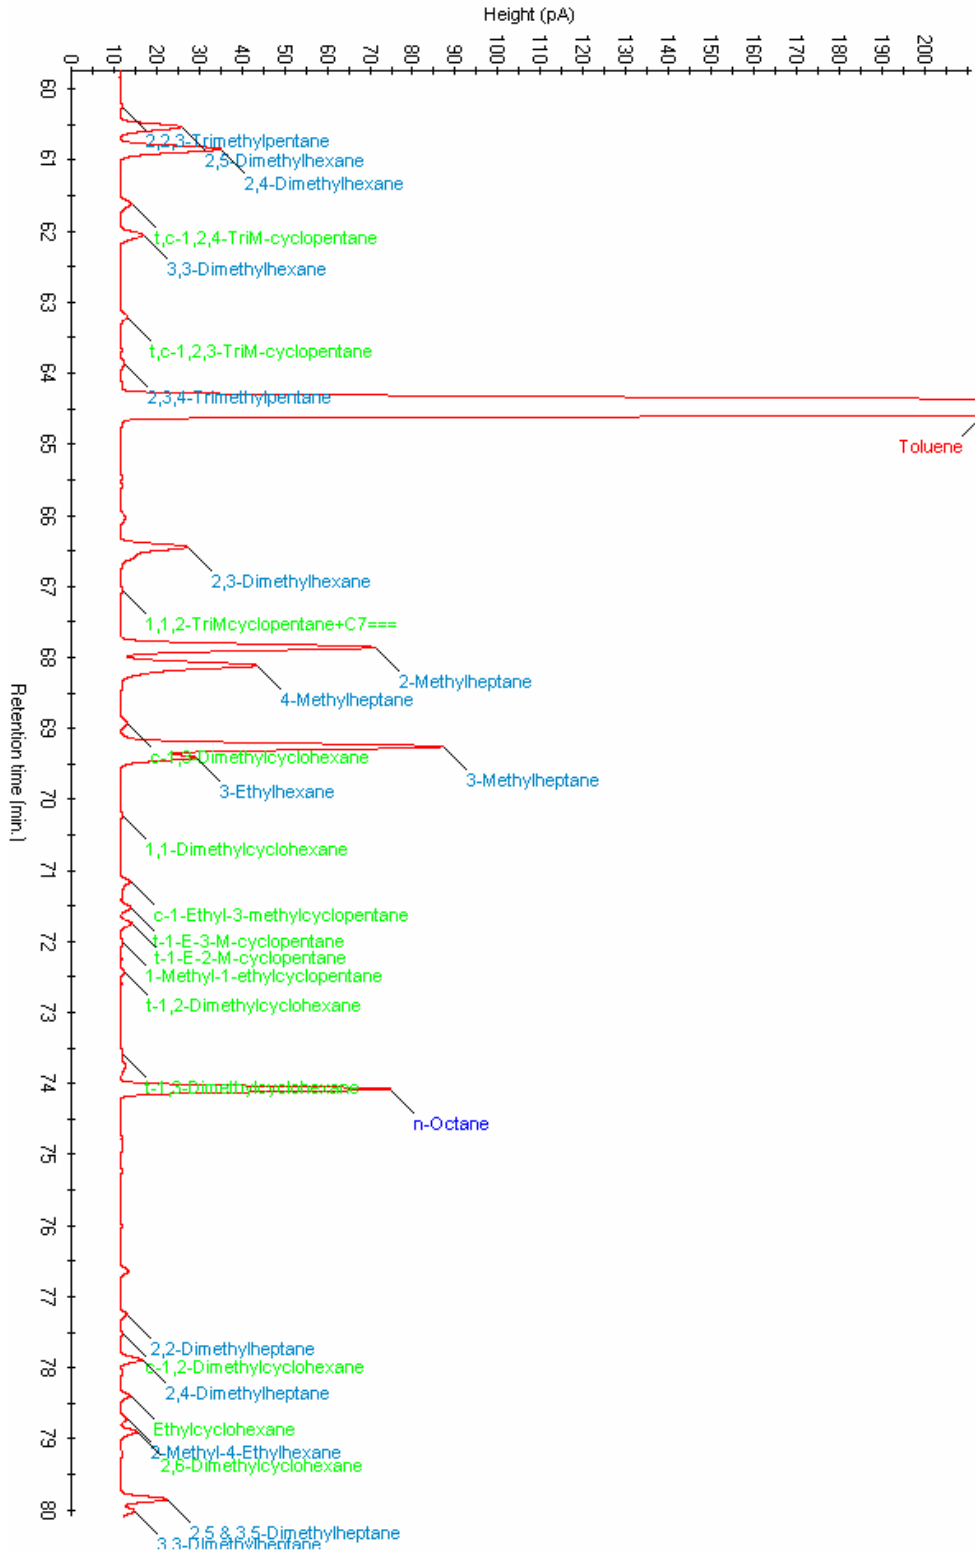

# Quality Control Sample

## Reformat - Box no. 20001.411


### 80 – 100 min

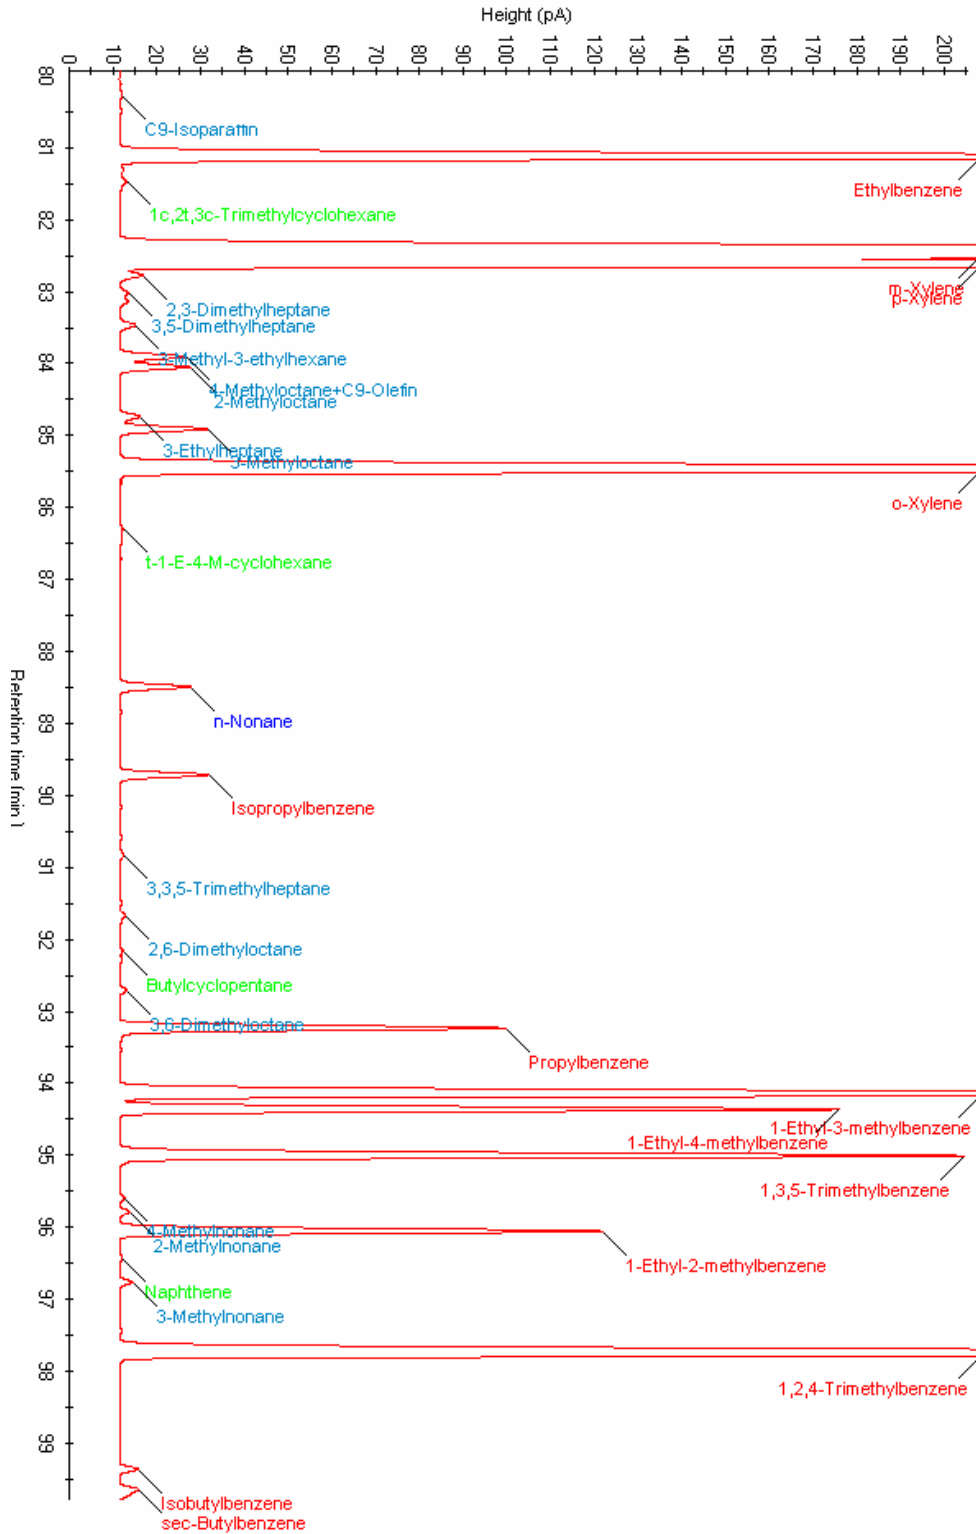

# Quality Control Sample

## Reformat - Box no. 20001.411


### 100 – 120 min

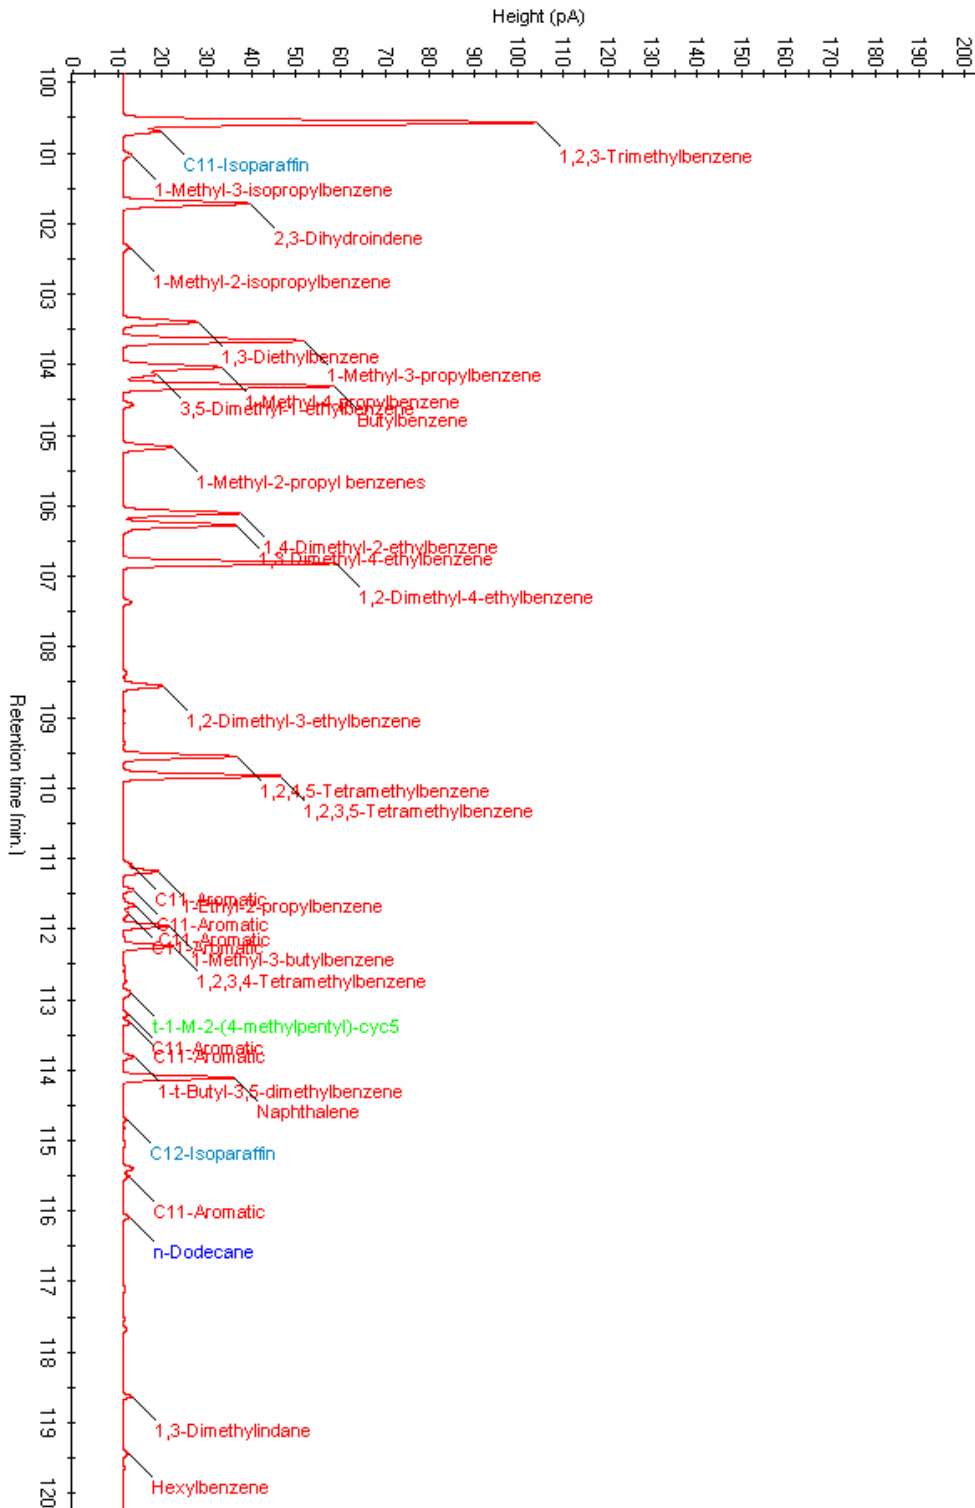

# Quality Control Sample

## Reformat - Box no. 20001.411


### 120 – 140 min

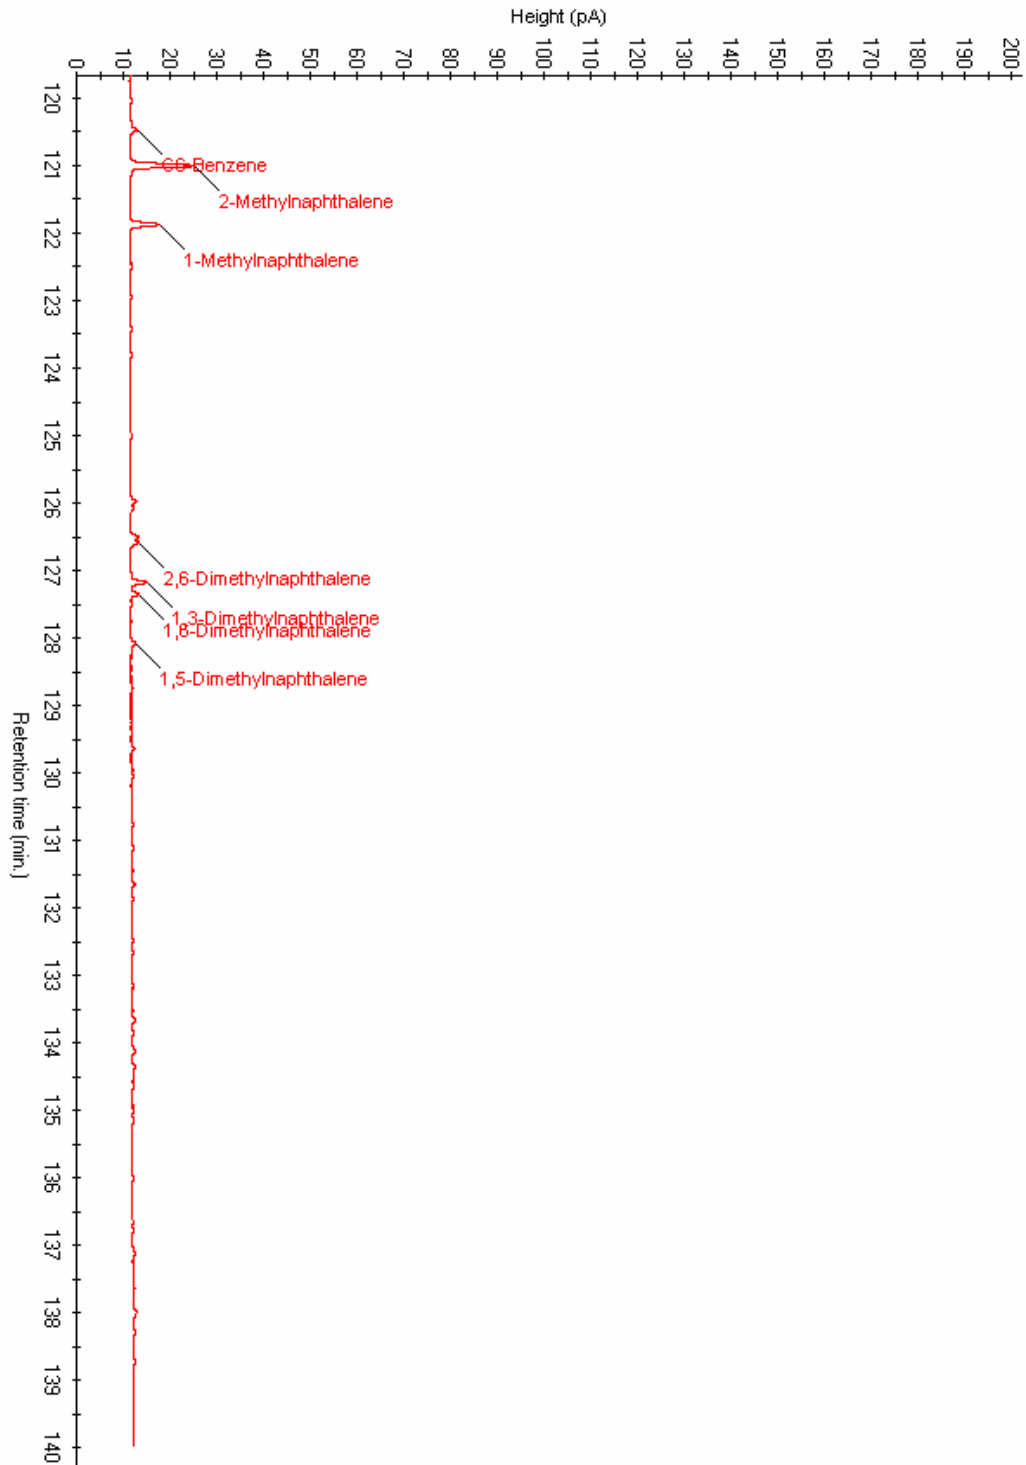

# Quality Control Sample

## FCC Naphtha - Box no. 20001.412


### 0 – 20 min

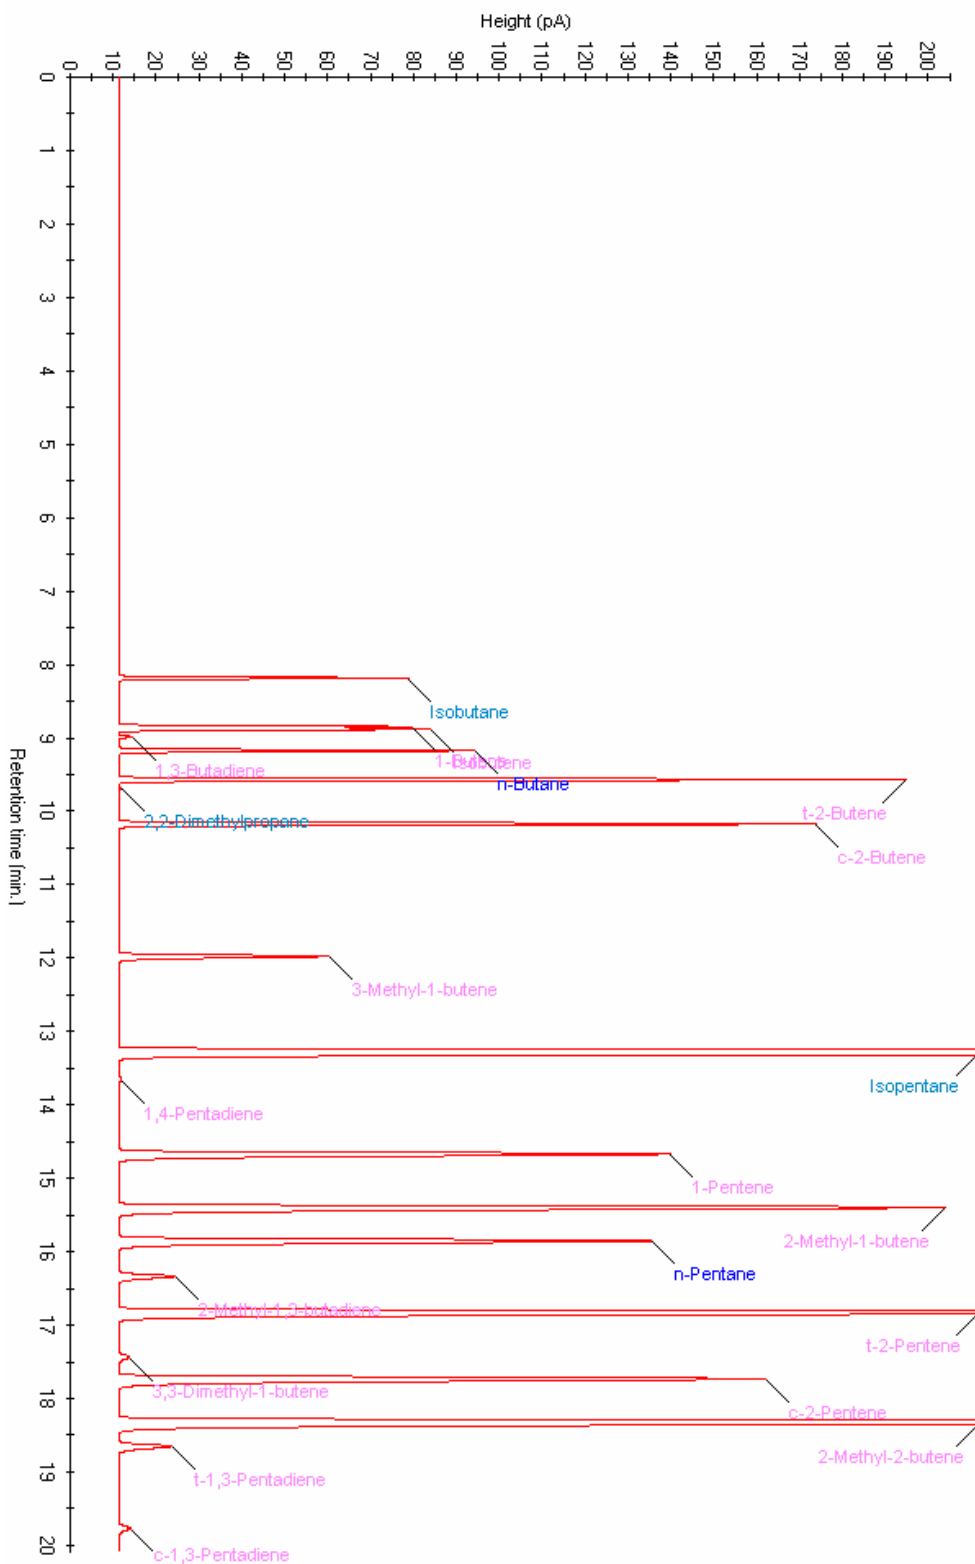

# Quality Control Sample

## FCC Naphtha - Box no. 20001.412


### 20 – 40 min

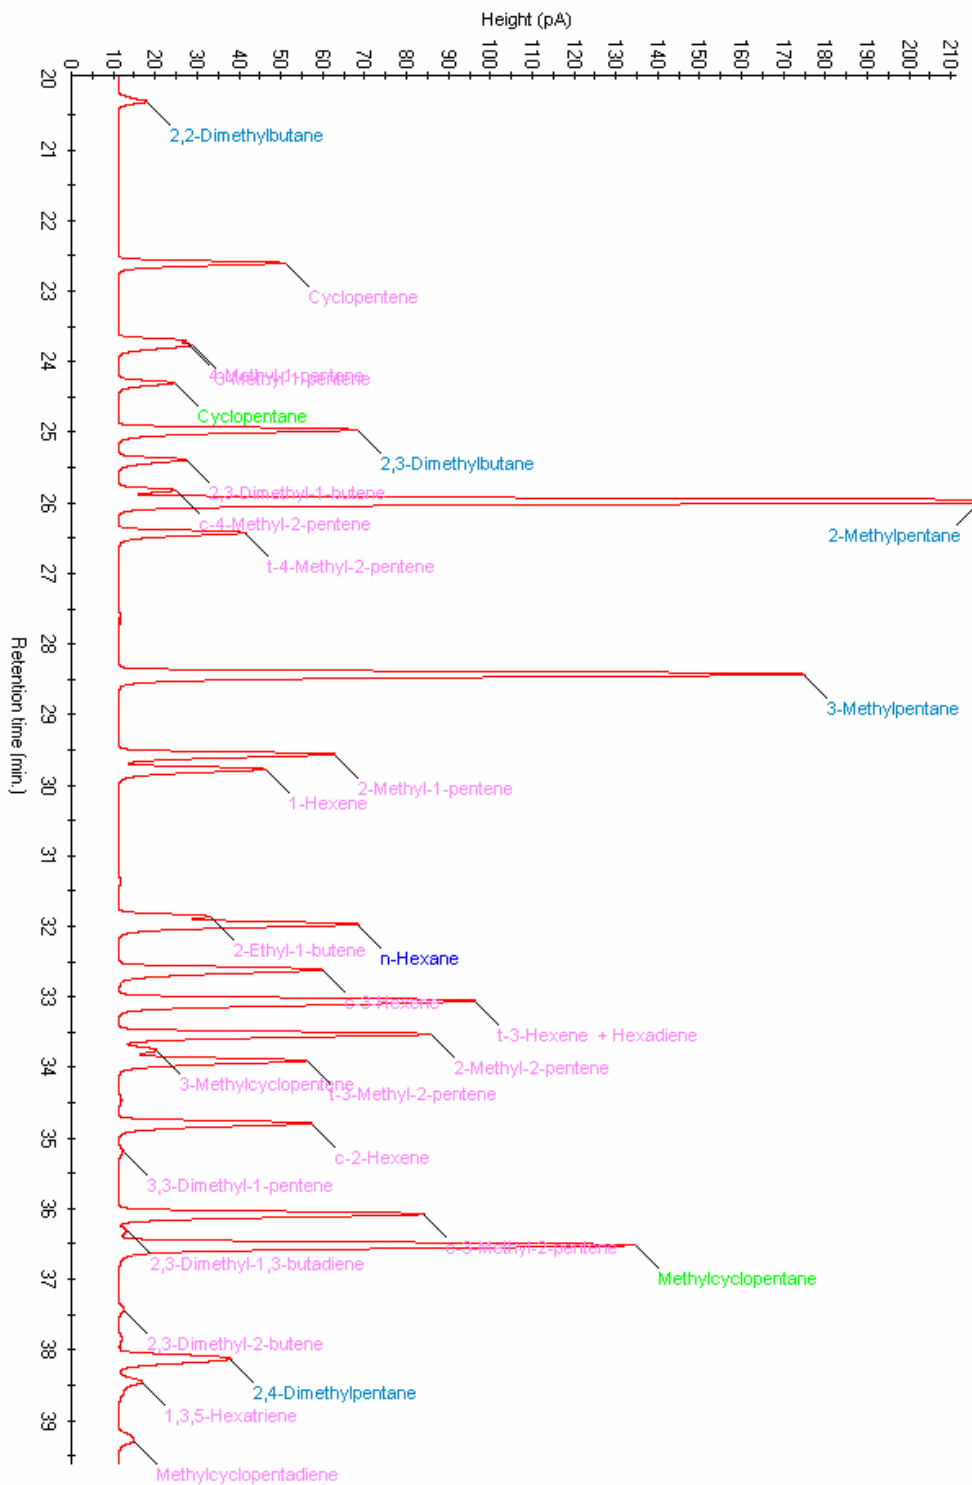

# Quality Control Sample

## FCC Naphtha - Box no. 20001.412


### 40 – 60 min

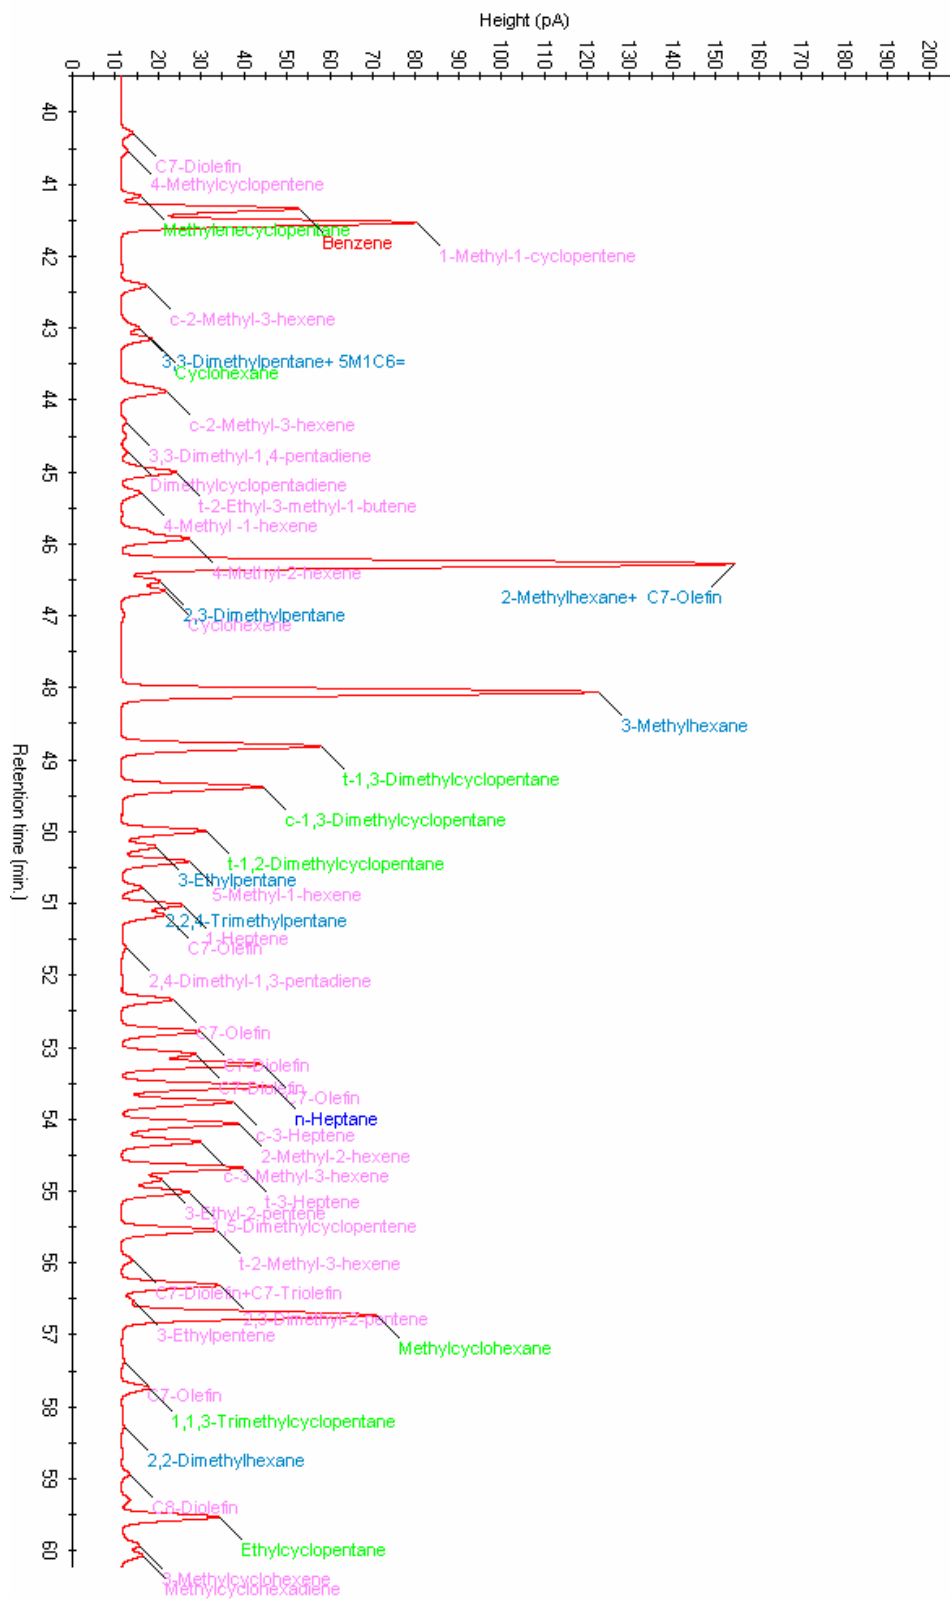

# Quality Control Sample

## FCC Naphtha - Box no. 20001.412


### 60 – 80 min

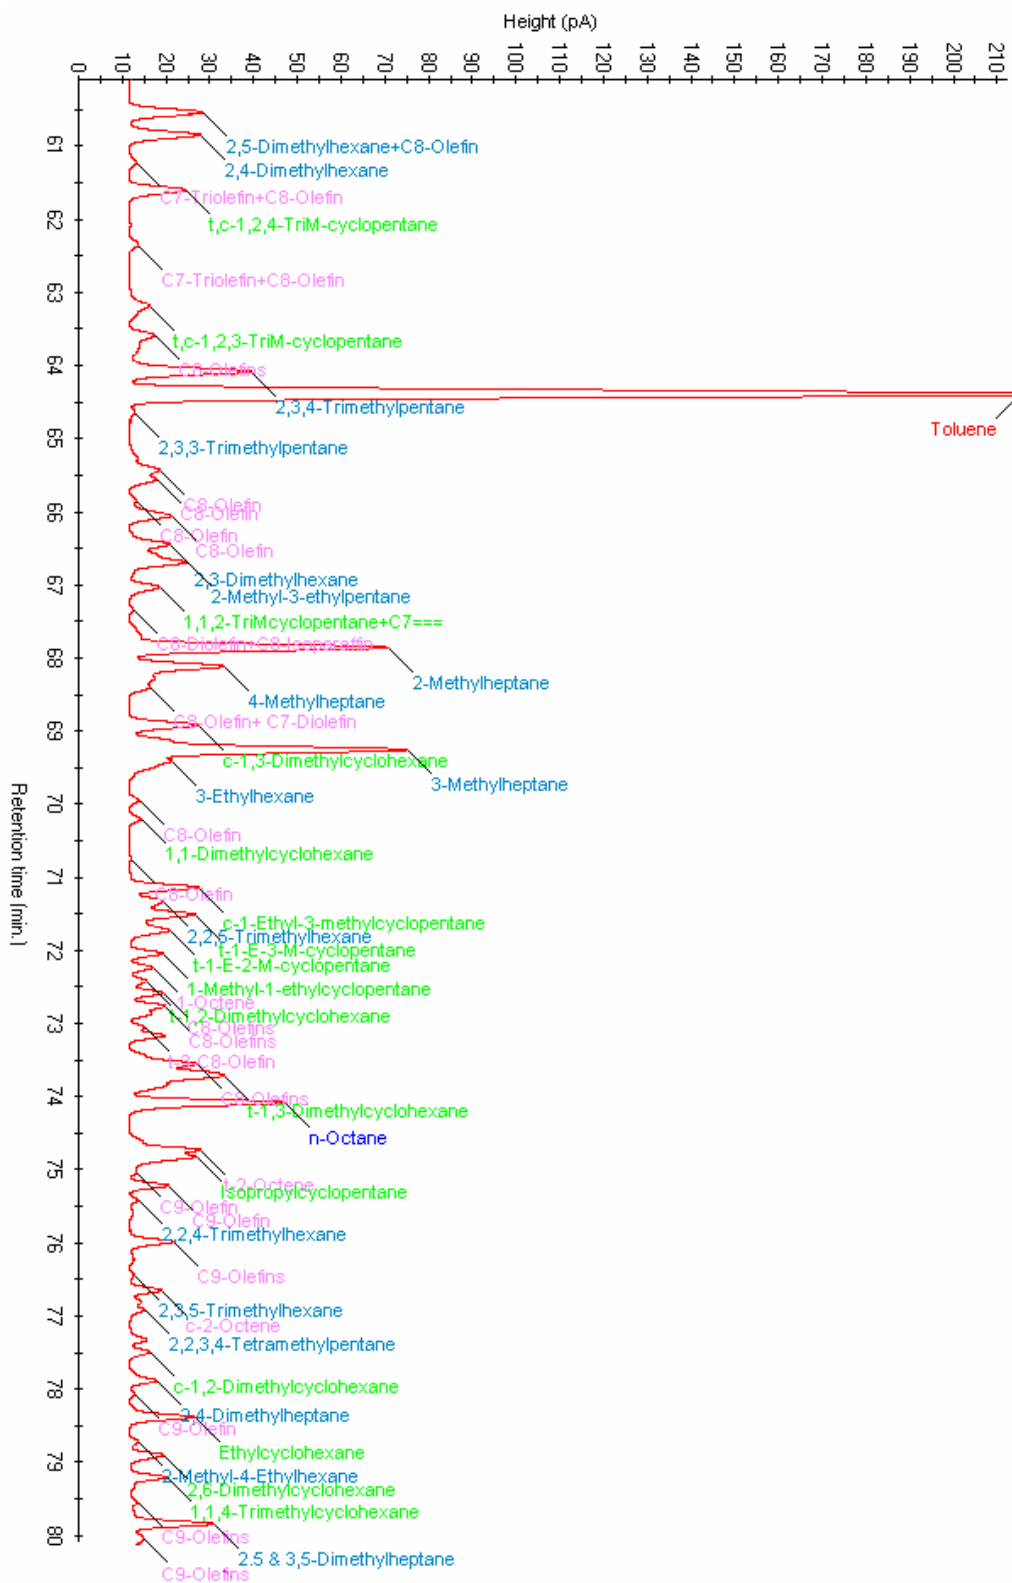

# Quality Control Sample

## FCC Naphtha - Box no. 20001.412


### 80 – 100 min

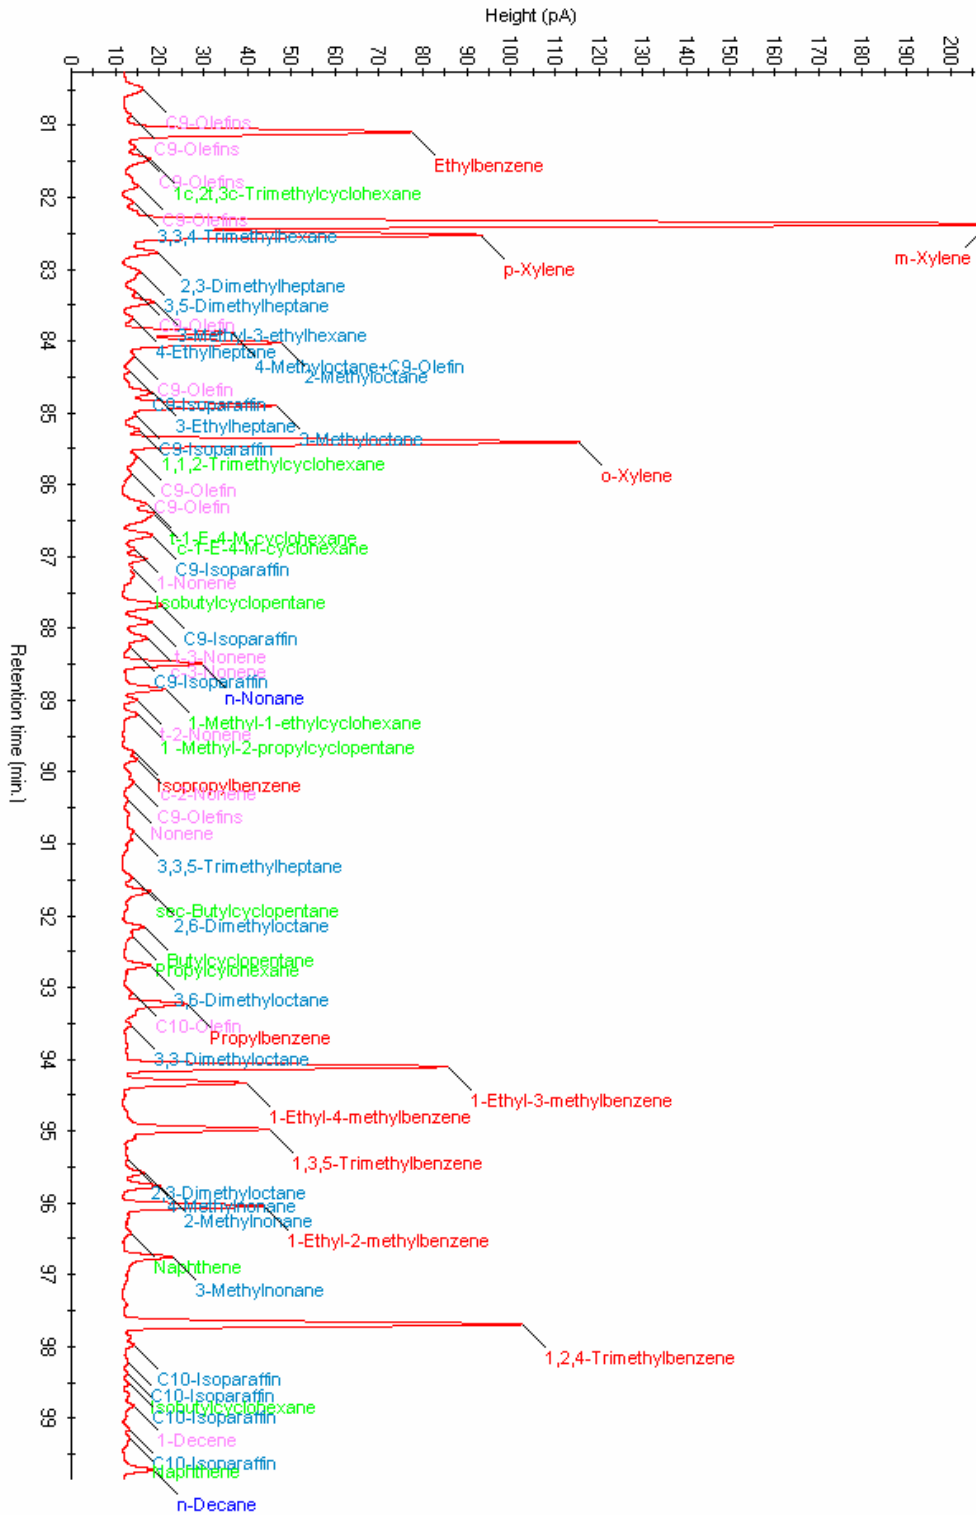

# Quality Control Sample

## FCC Naphtha - Box no. 20001.412


### 100 – 120 min

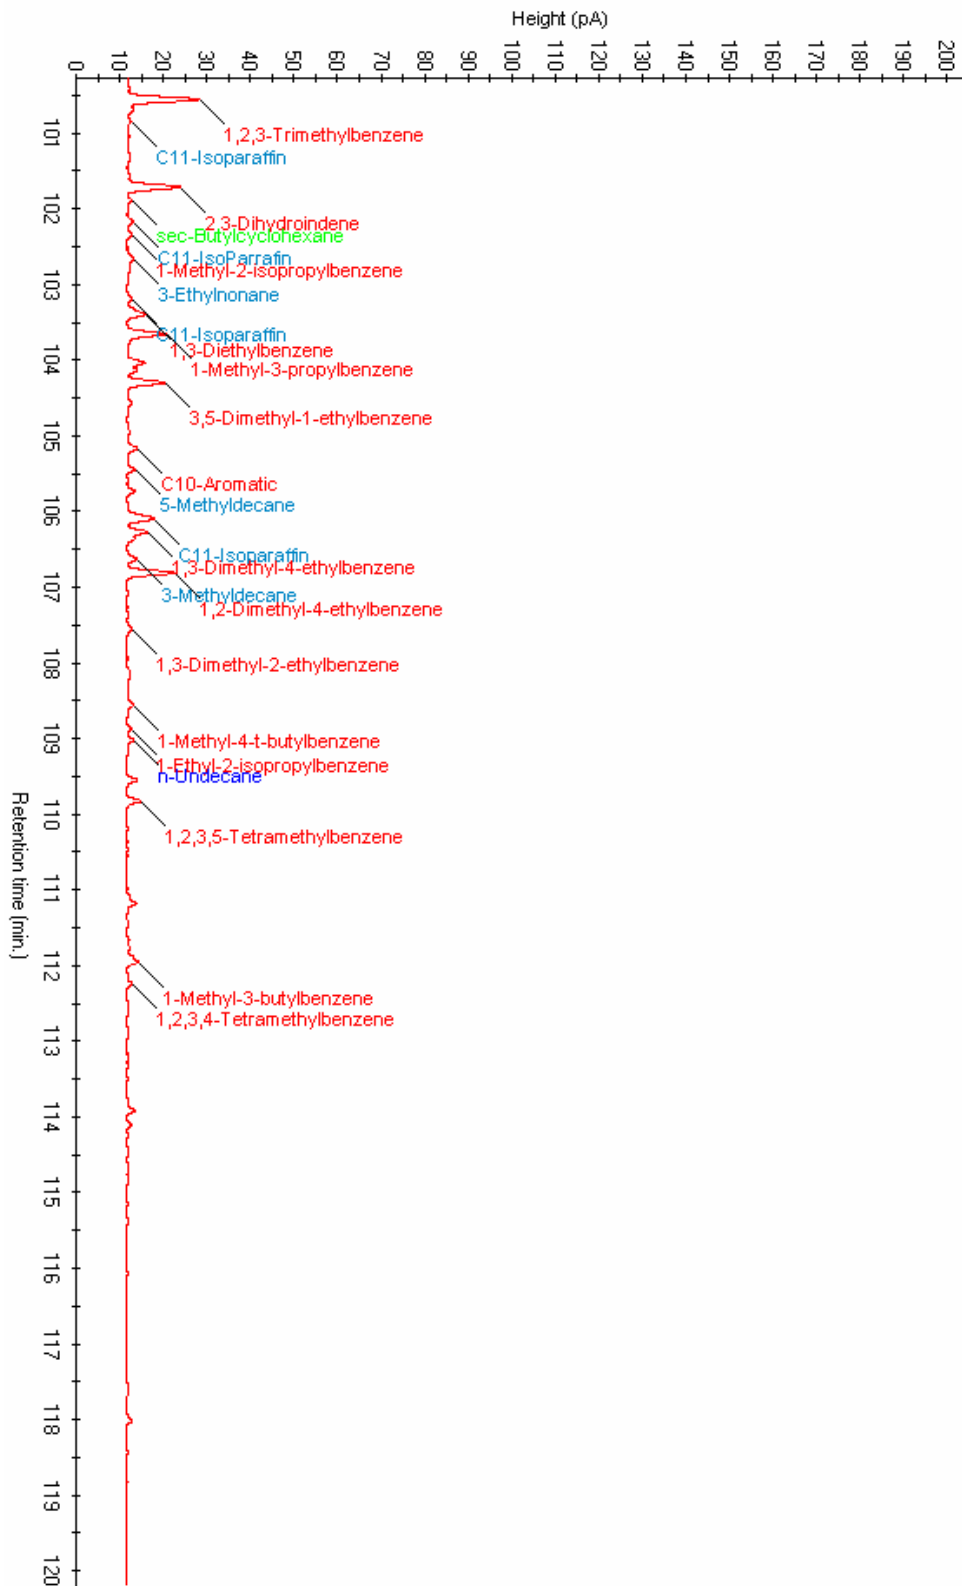

# Quality Control Sample

## Isomerate - Box no. 20001.413


### 0 – 20 min

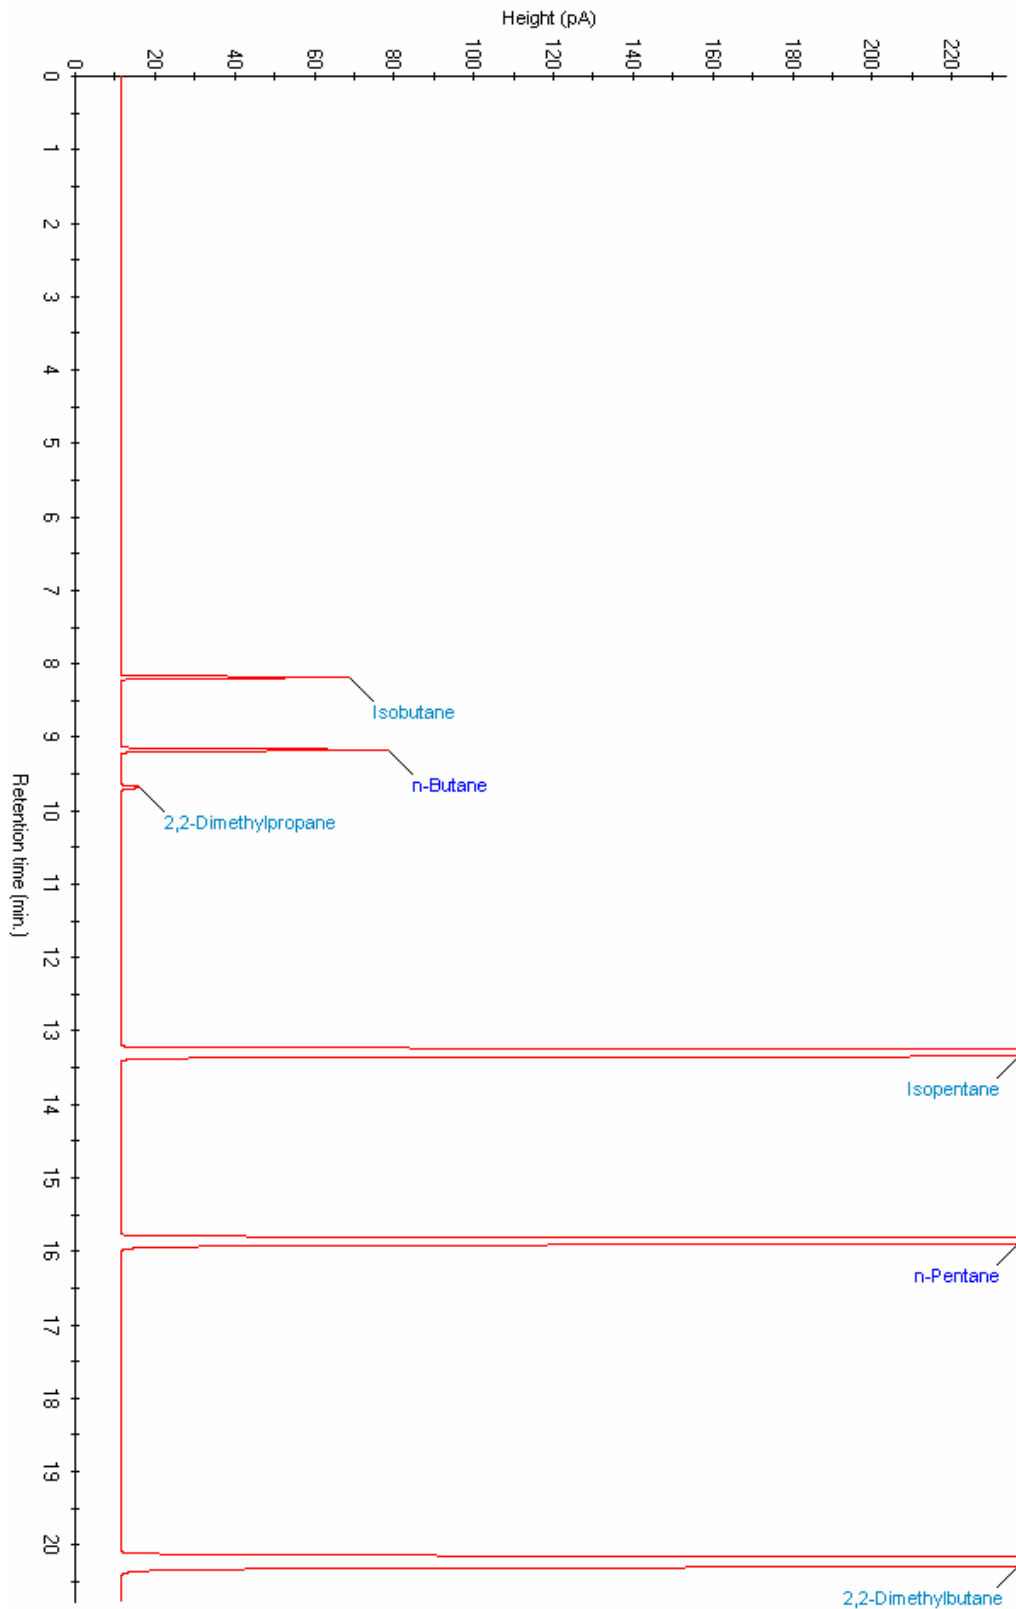

# Quality Control Sample

## Isomerate - Box no. 20001.413


### 20 – 40 min

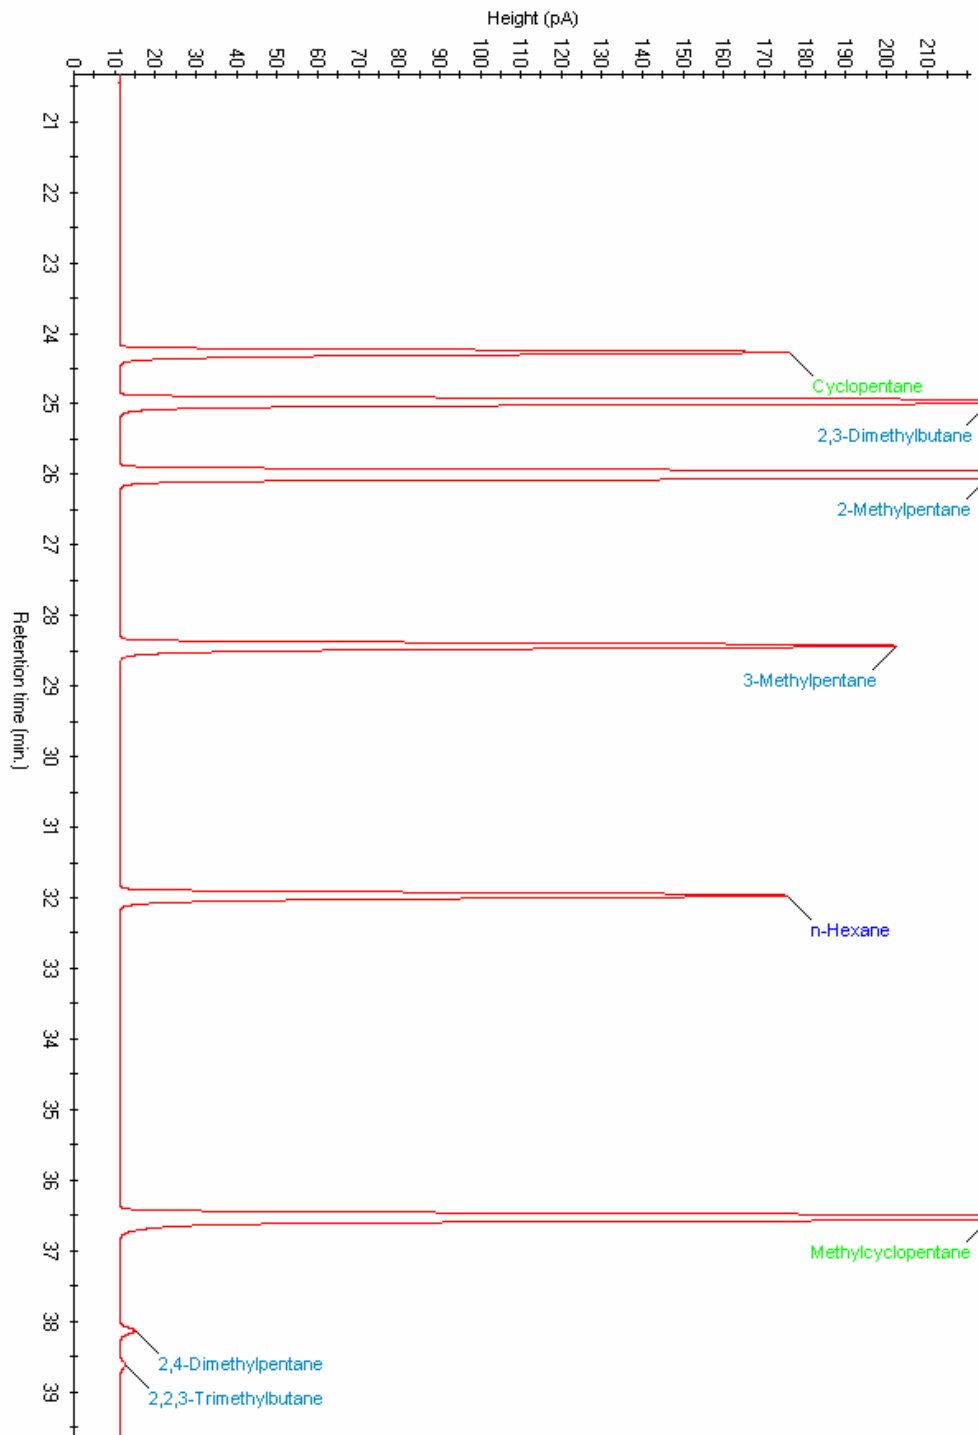

# Quality Control Sample

## Isomerate - Box no. 20001.413


### 40 – 60 min

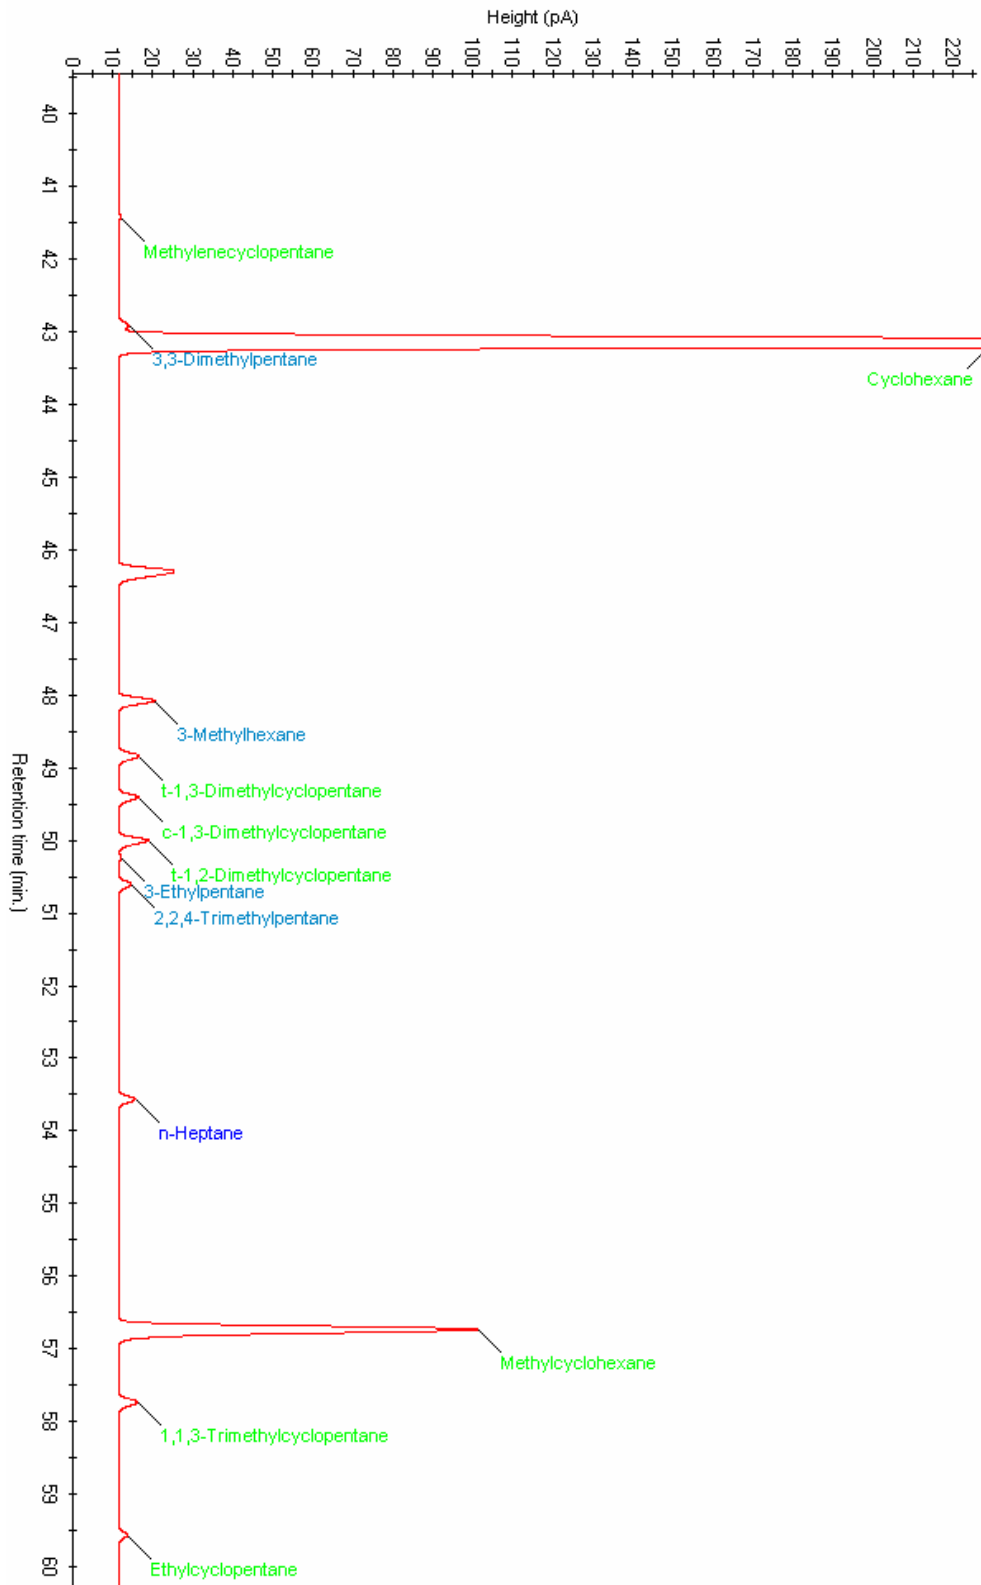

# Quality Control Sample

## Isomerate - Box no. 20001.413


### 60 – 80 min

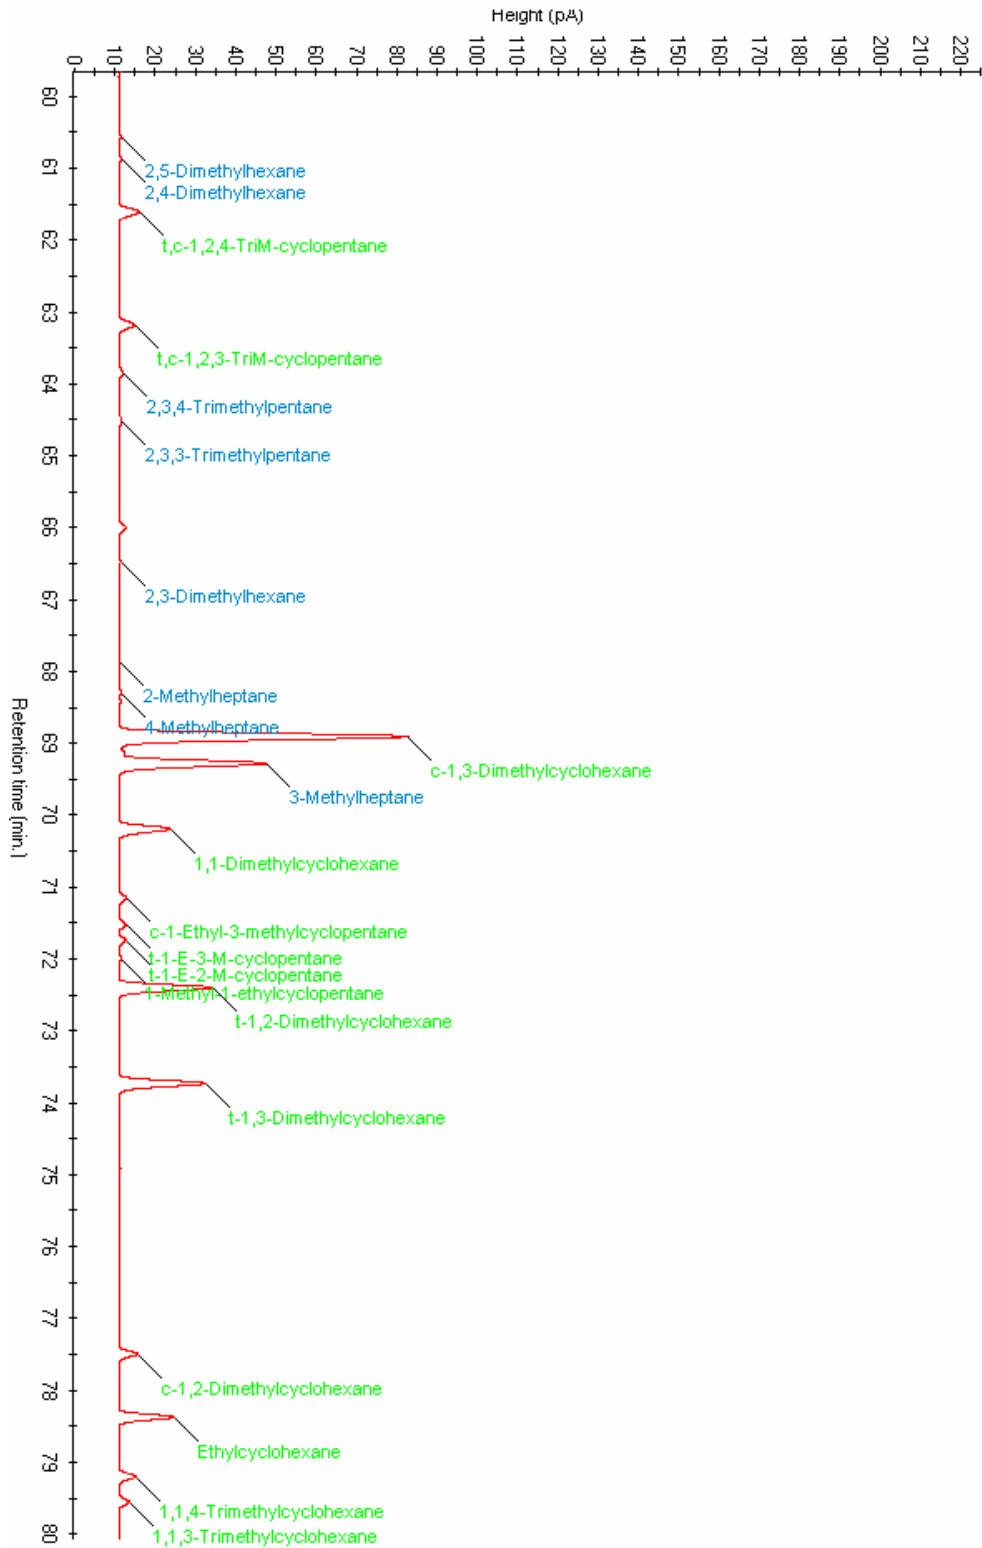

# Quality Control Sample

## Isomerate - Box no. 20001.413


### 80 – 100 min

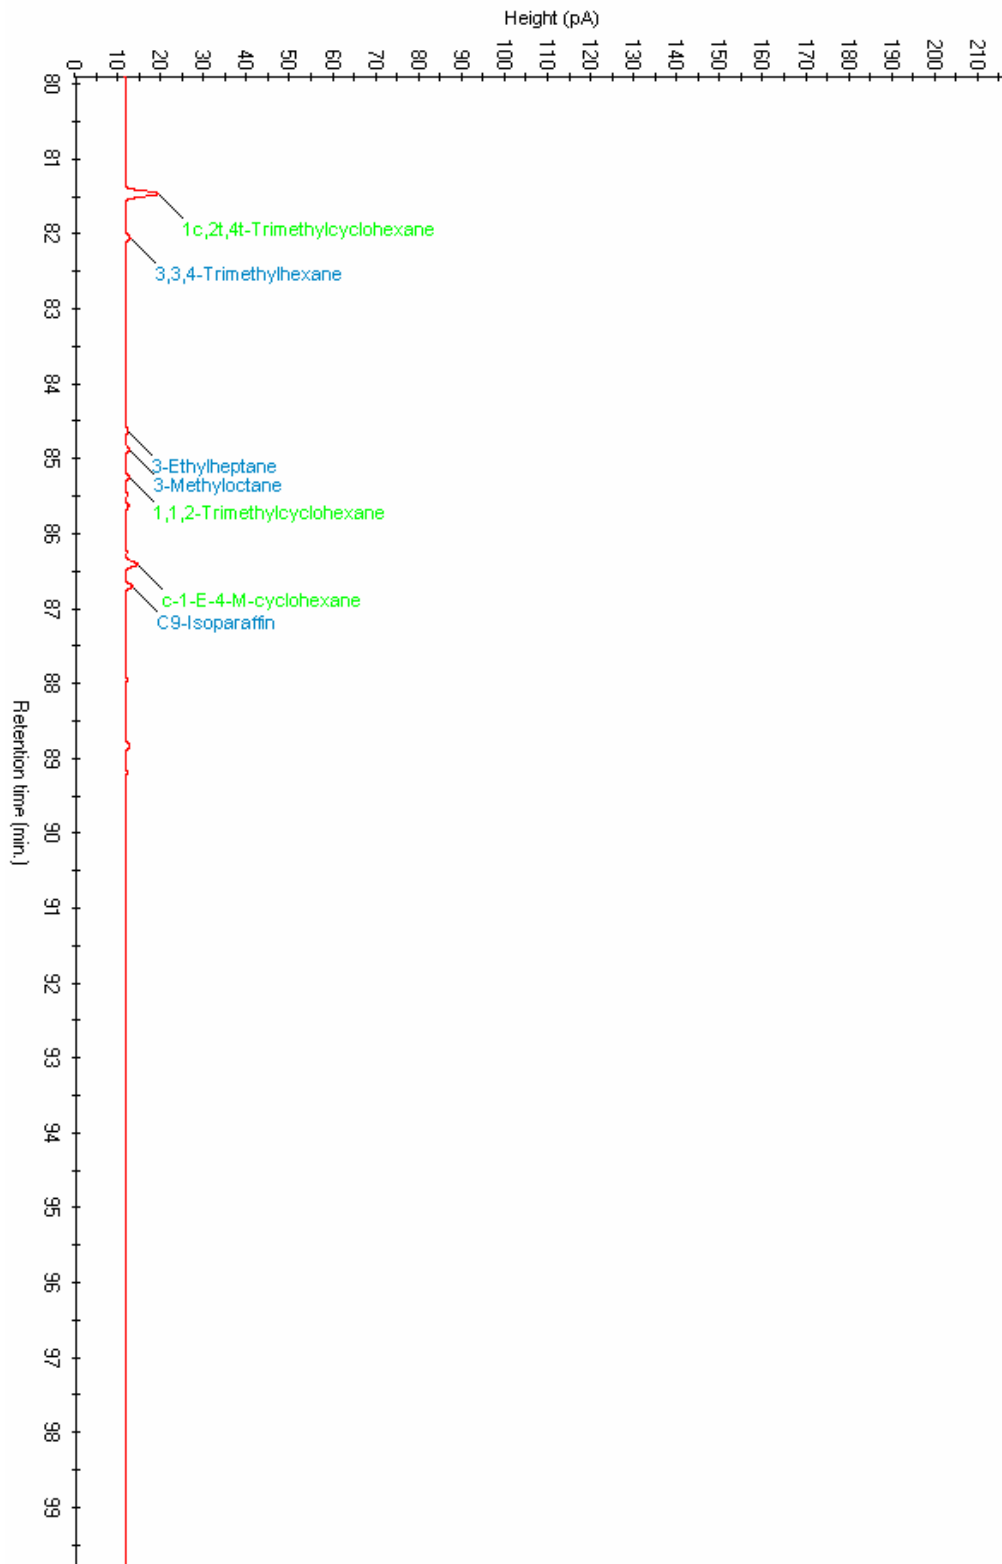

# Quality Control Sample

## Alkylate - Box no. 20001.414


### 0 – 20 min

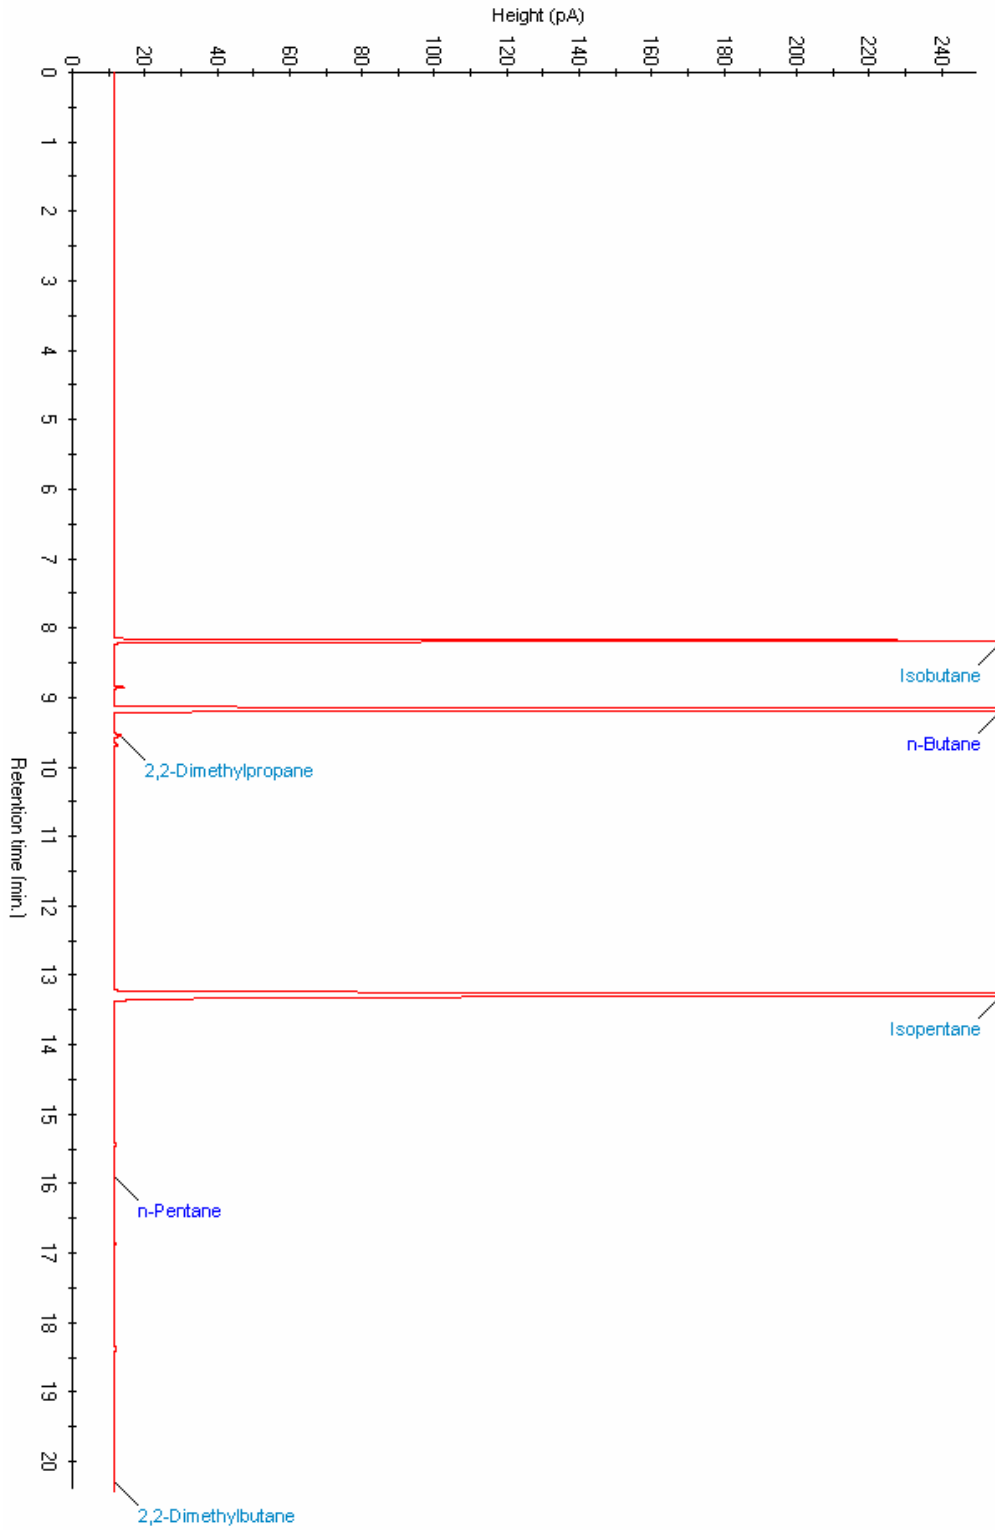

# Quality Control Sample

## Alkylate - Box no. 20001.414


### 20 – 40 min

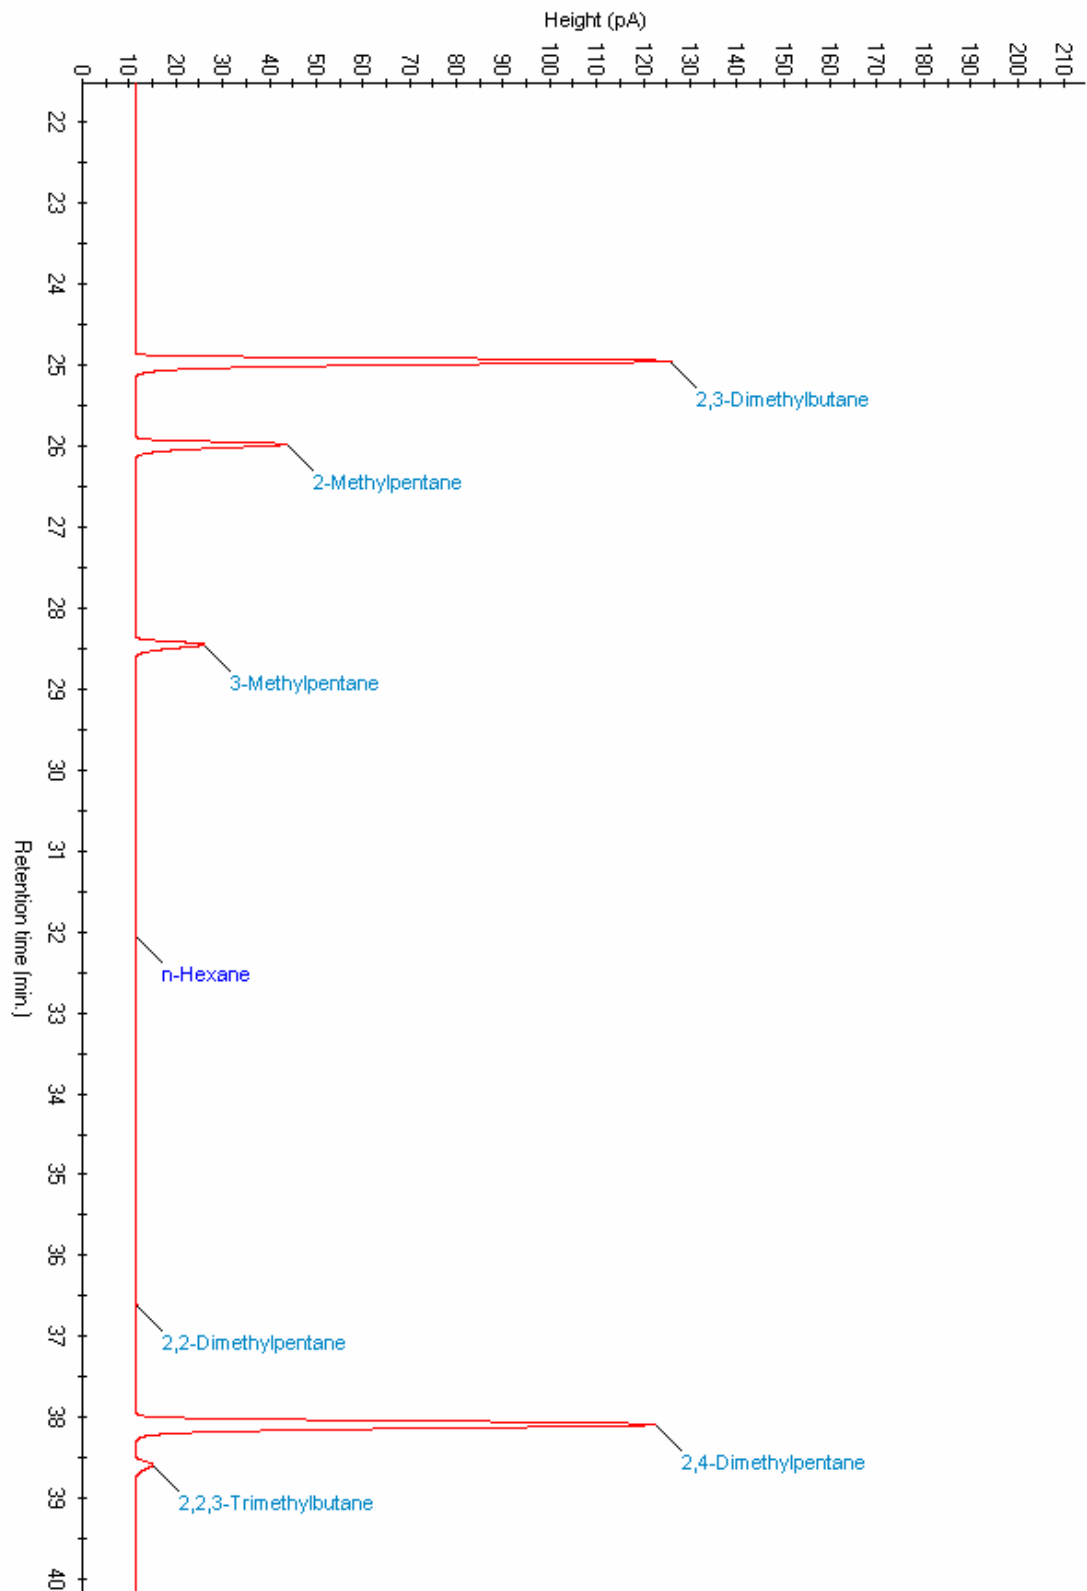

# Quality Control Sample

## Alkylate - Box no. 20001.414


### 40 – 60 min

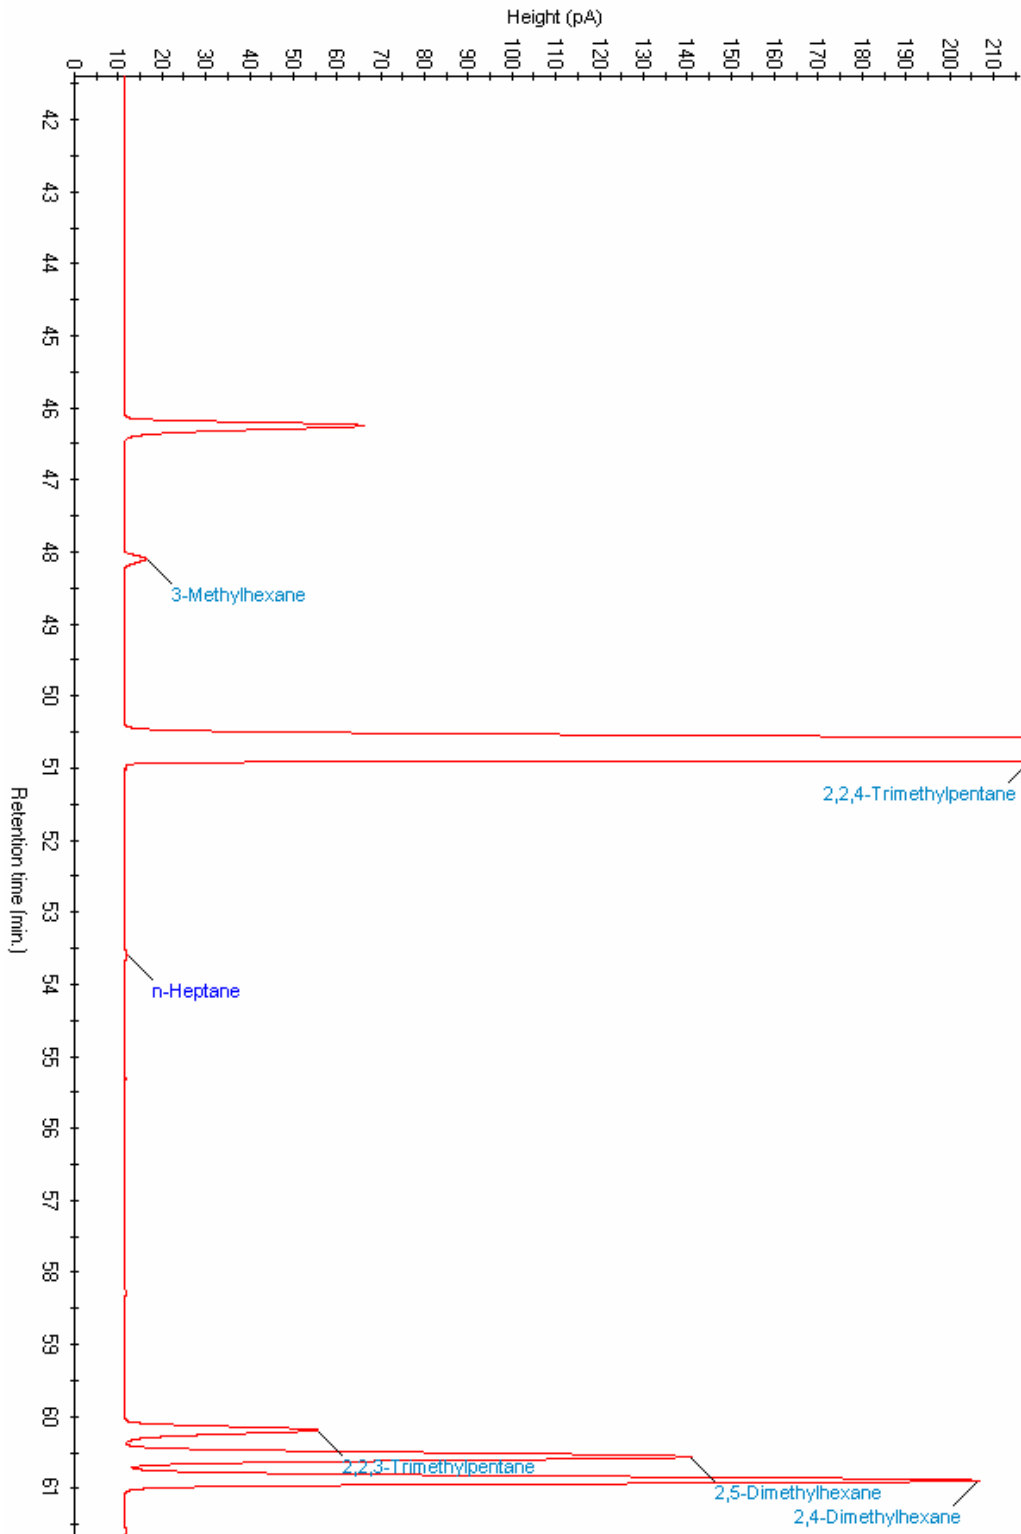

# Quality Control Sample

## Alkylate - Box no. 20001.414


### 60 – 80 min

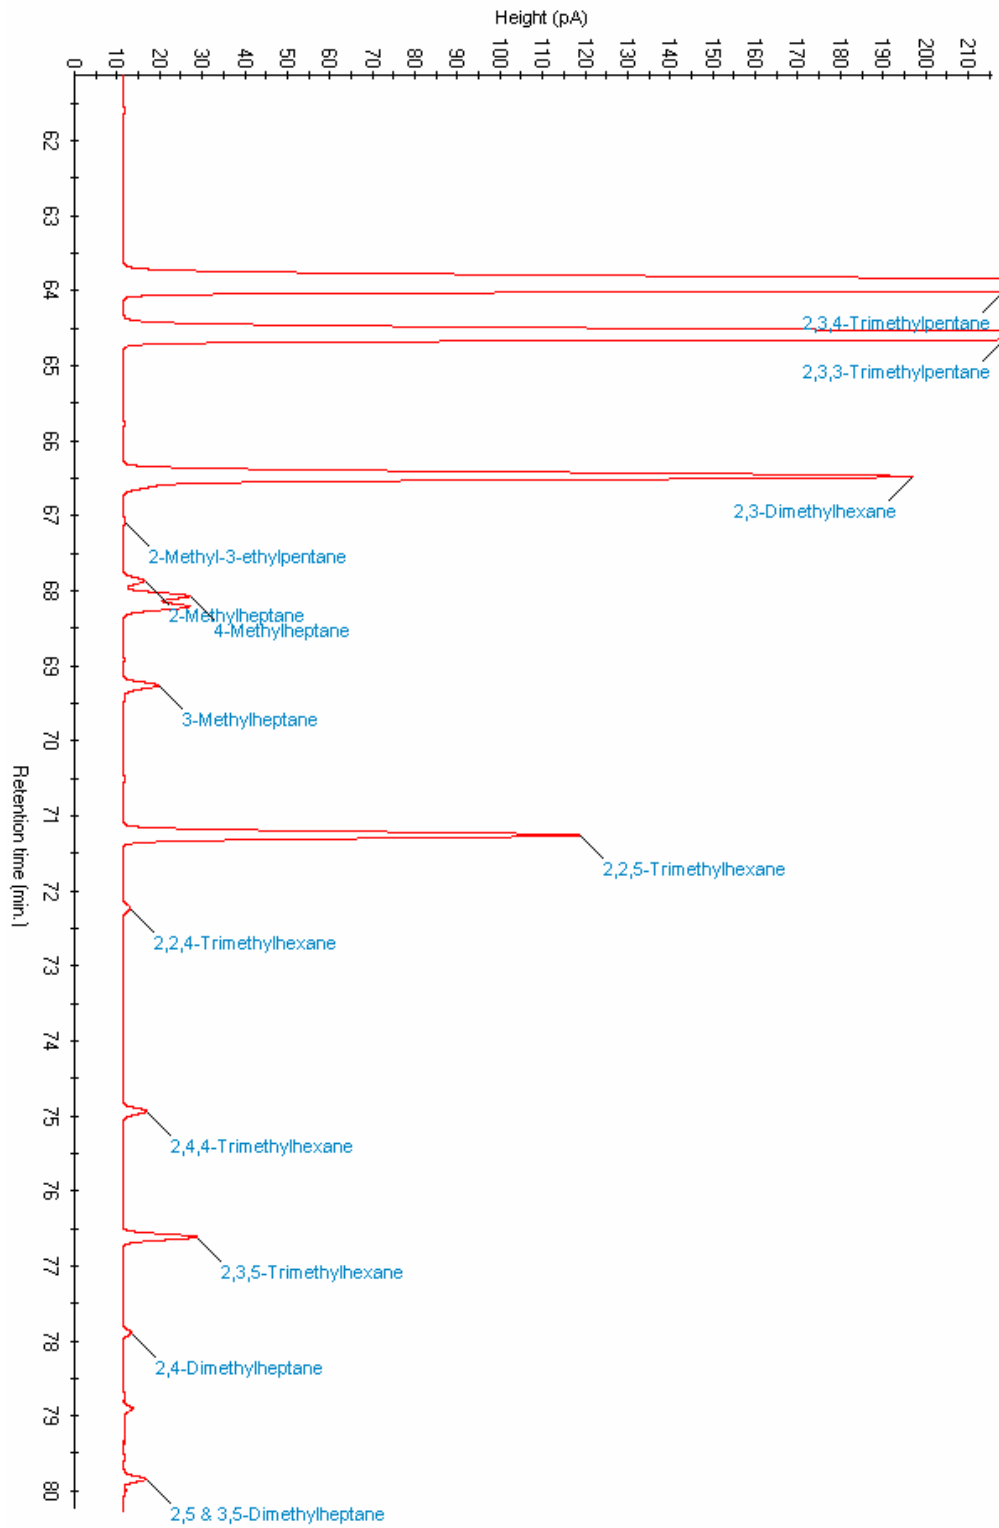

# Quality Control Sample

## Alkylate - Box no. 20001.414

### 80 – 100 min

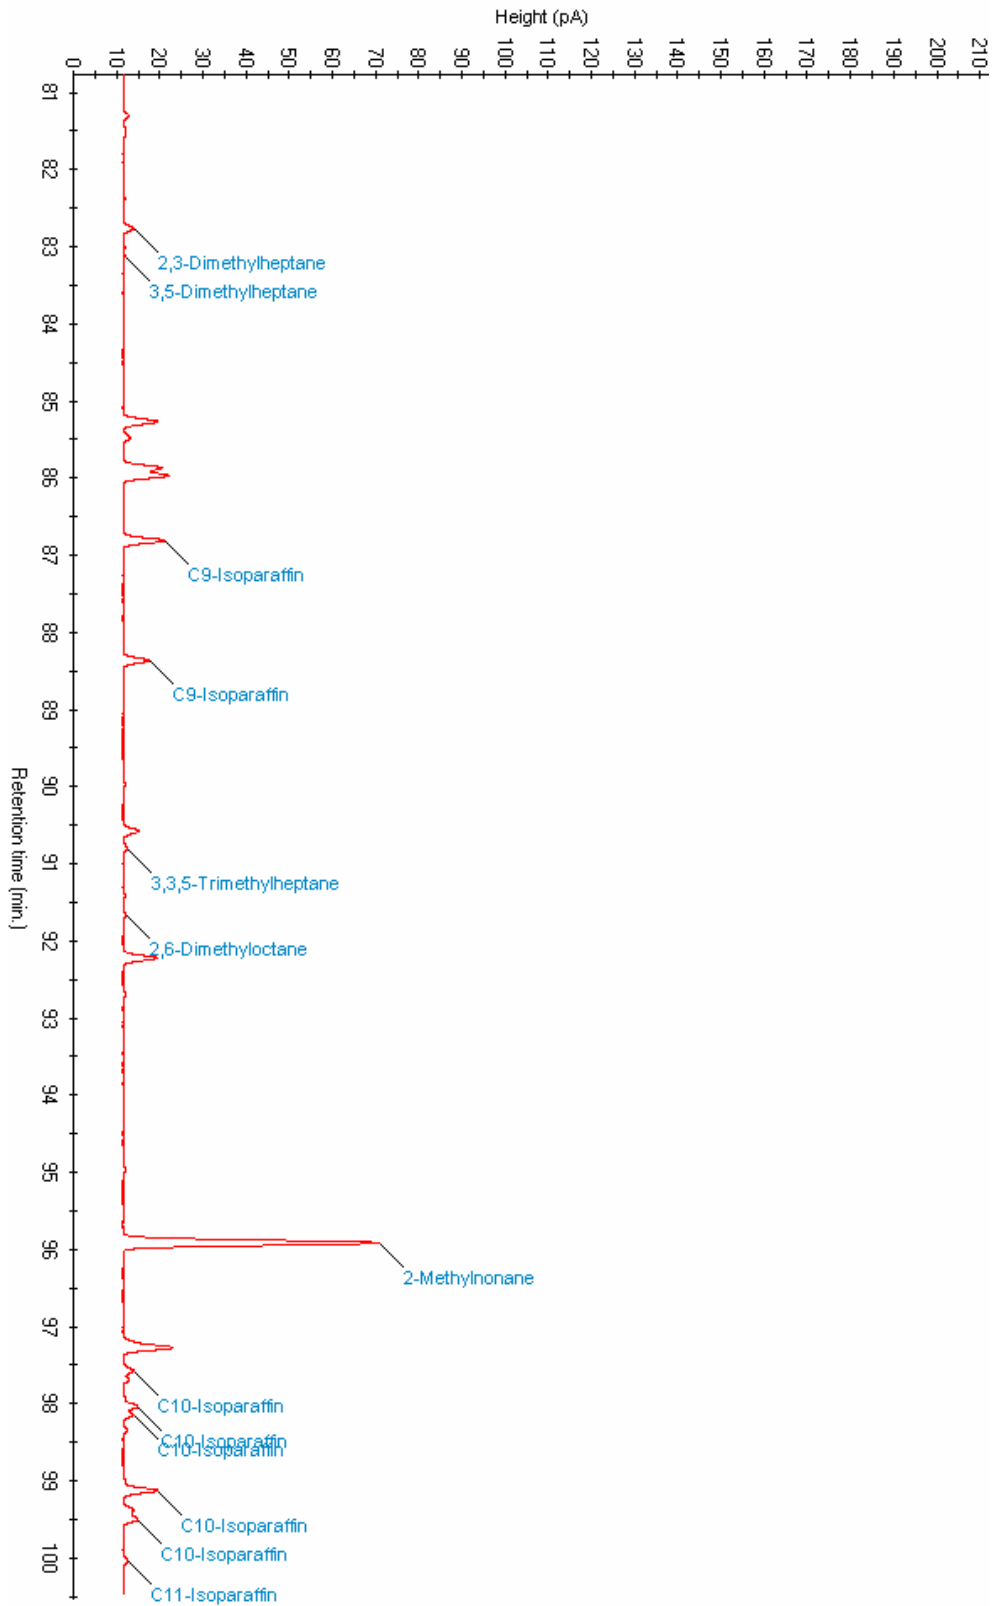

# Quality Control Sample

## Alkylate - Box no. 20001.414

### 100 – 120 min

